

2007 MasterCraft Owners Manual



ProStar
MariStar
X-Series

Welcome Aboard!

Congratulations on your choice of the finest ski and wakeboard boat available. MasterCraft is the recognized world leader for inboard ski boats today and has been for more than 35 consecutive years. The quality, innovation, selection and value are unmatched in the industry.

Please take a few minutes to read this owners manual completely in addition to carefully reviewing additional information also provided with your new boat. These publications will help answer most of the remaining questions you may have about your new boat.

Every effort has been made to make this manual accurate. All information is based on the latest product information available at the time of printing.

Because of our policy of continuous product improvement, we reserve the right to make changes at any time, without notice, in specifications and models and also to discontinue models. The right is also reserved to change specifications, parts or accessories at any time without incurring any obligation to equip the same on models manufactured before the date of the change.

The continuing accuracy of this manual cannot be guaranteed. The illustrations used in this manual are intended only as representative reference views and may not depict actual model components parts. Information about certain on-board components furnished by suppliers other than MasterCraft is provided separately. This information is available from your dealer.



Dangers, Warnings & Cautions

Throughout this manual the terms “danger,” “warning” and “caution” appear, alerting the boat owner or operator to dangerous or potentially dangerous situations that may arise. Those terms have the following respective meanings whenever they appear herein:



This is the safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.



DANGER indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury.



WARNING indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.



CAUTION indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury.



CAUTION used without the safety alert symbol indicates a potentially hazardous situation which, if not avoided, may result in property damage.

Failure to adhere to and comply with the safety dangers, warnings and cautions that appear in this manual can lead to serious illness, injury or even death and/or damage to your boat or the property of others. Beyond these warnings, boaters have a personal responsibility to utilize a common sense approach to the boating experience, including keeping individuals off or near the swim platform and the stern area of the boat during the engine operation. Personal flotation devices (“PFDs”) save lives and ensure positive experiences. **MasterCraft offers many proactive approaches to the boating experience, but the consumer is ultimately responsible for a positive and safe involvement in boating.**

Be sure to review the *Boating Safety* section of this manual, which immediately follows this section. Because of the importance of these dangers, warnings and cautions, they are reprinted here, along with the pages on which you’ll find them. Please note that the safety information statements presented below are categorized for information purposes only, and are not presented in any particular order of importance. Each of the statements referenced below and in the other sections of this manual provide you with important safety-related information and must be read and followed to avoid injury or damage, as applicable. We strongly encourage you to cross-reference and read the dangers, warnings and cautions within the context in which they are presented by reading and reviewing those sections.



DANGER indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury.

1: Failure to comply with safety-related information and instruction may result in serious injury or death to you and/or others. Always use common sense when operating the boat or participating in any activities associated with the boat. (Page 1-3)

2: Gasoline is highly flammable and its vapors may ignite resulting in fire or explosion. Be sure to keep all sparks and flames well away from the area while inspecting the boat’s fuel system. (Page 15-5)

- 3: Gasoline is explosive. If you see or smell the presence of gasoline during your inspection, **DO NOT START YOUR ENGINE!** Remove your ignition key from the ignition switch and call your MasterCraft dealer for service. (Page 15-15)
- 4: Gasoline is extremely flammable and highly explosive under certain conditions. Always stop the engine and never smoke or allow open flames or sparks within 50 feet of the fueling area when refueling. (Page 6-2)
- 5: Take care not to spill gasoline. If gasoline is spilled accidentally, wipe up all traces of it, with dry rags immediately and dispose of properly on shore. (Page 6-2)
- 6: Failure to operate the blower as instructed could cause improper ventilation of the boat engine and bilge areas. Fuel vapors can accumulate in this area and cause a fire or explosion which may result in serious injury or death! (Page 5-4)



- 7: To prevent a possible explosion, operate the blower for at least four (4) minutes before starting the engine and always when at idle or slow-running speed. Explosive gasoline and/or battery fumes may be present in the engine compartment. Failure to do so may result in serious injury or death! (Page 9-1)
- 8: Carbon monoxide is a colorless, tasteless, odorless and poisonous gas that accumulates rapidly and can cause serious injury or death. Exposure to carbon monoxide can be fatal in a matter of minutes. Exposure to even low concentrations of carbon monoxide must not be ignored because the effects of exposure to carbon monoxide are cumulative and can be just as lethal as at high concentrations. Carbon monoxide from exhaust pipes of inboard or outboard engines may build up inside and outside the boat in areas near exhaust vents. **STAY AWAY** from these exhaust vent areas, which are located at the stern of the boat, and **DO NOT** swim or engage in any watersports or other activities in or near the stern area of the boat, including, without limitation, the swim platform and the rear sun deck, when the engine is in operation. Under no circumstances should "teak surfing" or similar activities be performed during the operation of your MasterCraft boat—such activities are a misuse of this product. (Page 2-1)
- 9: The safety switch lanyard must be attached to the operator whenever the engine is started. Failure to do so may result in serious injury or death. (Page 5-4)
- 10: Never override or modify the engine safety shut-off switch or engine neutral starting safety switch in any way. (Page 1-3)
- 11: Before starting the engine, open the engine compartment and check for gasoline fumes, fuel and oil leaks or the presence of fuel or oil in the bilge. (Page 9-1)
- 12: Do not tow more than two persons at one time on a tow tower. The tow tower should be used only for water skis, wakeboards, or recreational towables and not for parasailing, kite flying or towing other boats. Do not add any attachments that are not installed by MasterCraft. Do not climb on, sit on, stand on, jump off or dive off the tower. Never allow passengers to sit behind the tow rope attachment point. Never allow loose tow rope ends to dangle. Always be certain that all bolts are in place and tight before and during use. When the tower is up, watch for low obstacles such as tree limbs, bridges or power lines. (Page 1-4)



WARNING indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.

- 1: **DO NOT** launch or operate the boat if any problem is found during the Safety Check. A problem could lead to an accident during the outing, resulting in serious injury or death. Any and all problems should receive attention immediately. See your MasterCraft dealer for assistance. (Page 7-1)

- 2: Running the engine with a flame arrestor removed increases the possibility of fire or explosion if the engine should backfire and gasoline fumes are present. If the engine is operated without the flame arrestor secured, extreme care must be taken to ensure that the engine compartment is well-ventilated and that no fuel leaks are present. (Page 17-2)
- 3: Battery electrolyte fluid is dangerous. It contains sulfuric acid, which is poisonous, corrosive and caustic. If electrolyte is spilled or placed on any part of the human body, immediately flush the area with large amounts of clean water and seek medical aid. (Page 15-3)
- 4: When charging, batteries generate small amounts of dangerous hydrogen gas. This gas is highly explosive. Keep all sparks, flames and smoking well away from the area. Failure to follow instructions when charging a battery can cause an electrical charge or even an explosion of the battery which could cause serious injury or death. (Pages 15-3 and 15-7)
- 5: The engine box serves as a machinery guard. The engine must be OFF whenever the box is open. Clothing or body parts can get caught in moving parts, causing serious injury or death. Keep away from moving parts! (Pages 15-5 and 15-6)
- 6: Adding additional ballast to your MasterCraft boat is not recommended, and can result in impaired visibility, diminished handling characteristics and instability when operating your boat, and may result in potential structural and/or engine damage to your boat, which damage will not be covered by your warranty. (Page 10-1)
- 7: Use of improper parts can cause component or engine failure, which may result in serious injury or death! (Page 12-1)
- 8: Towers on boats are intended for use in wakeboarding only. Use of the tower to tow other boats, kites or any other purpose may result in serious injury or death, and may damage the boat, which will not be covered by warranty. (Page 1-4)



CAUTION indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury.

- 1: Be sure that all fasteners you use are approved and rated for marine use. Most fasteners used on MasterCraft boats are stainless steel or specially coated to resist corrosion. (Page 12-1)
- 2: All replaced fuel system components must meet United States Coast Guard ("USCG") and American Boat & Yacht Council, Inc. ("ABYC") standards, and must be Underwriter's Laboratory ("UL")-approved. Inferior quality components pose a serious safety threat to you and others, and the use of inferior components may result in serious injury or death. Resulting damage may void your warranty. (Page 15-15)



- 3: Continuing to operate the boat while the temperature is above normal operating parameters may cause serious damage to your engine. Damage to your engine resulting from operating the engine in an overheated condition can be costly to repair. Such damage is not covered by your warranty! (Page 5-2)
- 4: Do not continue to run the engine if the oil pressure is low. If you do, the engine can become so hot that it—or surrounding components—could catch fire. You or others could be burned and the boat seriously damaged. Check your oil level and add an appropriate amount of approved motor oil

before operating again or have your boat serviced by your local MasterCraft dealer. Note that damage to your engine from neglected oil problems can be costly to repair. Such damage is not covered by your warranty. (Page 5-3)

CAUTION

CAUTION used without the safety alert symbol indicates a potentially hazardous situation which, if not avoided, may result in property damage.

- 1: To ensure proper break-in and lubrication, boat owners should not remove the factory break-in oil until after the initial ten (10) hours of operation. At that time, an oil change should be performed by an authorized MasterCraft service technician/your local MasterCraft dealer. (Page 8-1)
- 2: DO NOT use the ski pylon for lifting. It is NOT designed as a central lifting point. Also, DO NOT use the stern ski tow as a lifting ring. The deck will be damaged. See the Storage Cradle sub-section of the Lifting the Boat section of this Manual. Also never lift a boat with a large amount of water in the bilge or containing a water-filled device such as a Fat Sac or ballast system. The extra stress will put an excessive load on the hull and lifting equipment that may seriously damage the boat and void your warranty. (Page 11-1)



- 3: Continued operation after the warning light has illuminated may cause severe damage. This will void your warranty. (Page 9-3)
- 4: Because of the complexity of preparing your boat for proper winter storage, as well as the possibility of extreme damage to the engine if a preparation error was made during winterization, MasterCraft recommends that you schedule an appointment with your local MasterCraft dealer and permit the dealer to perform the winterization procedures. (Page 17-1)
- 5: Add-on equipment may adversely affect the alternator output or overload the electrical system. Any damage caused as a result will not be covered by, and may void, your warranty. (Page 15-3)
- 6: Ignoring elevated temperatures on a temperature gauge or any other evidence of the engine operating at temperatures above recommended levels can result in serious damage to the engine. Any resulting damage will not be covered by, and may void, your warranty! (Page 15-4)
- 7: Failure to follow the engine oil recommendation listed in the manual can cause additional engine wear and increase the possibility of engine component failure. Damage to your engine due to incorrect oil usage can be costly to repair, and is not covered by your warranty! (Page 8-2 and 15-10)
- 8: Failure to maintain your coolant at the proper level can cause engine damage. Your warranty will not cover engine damage due to overheating or any other cause associated with improper coolant levels. (Page 15-2)
- 9: Do not operate the starter motor continuously for more than fifteen (15) seconds without at least a two (2) minute "cool-down" period. Failure to do so may cause the starter to overheat, resulting in damage. Failure to release the ignition key after the engine has started may cause damage to the starter motor and drive. (Page 9-2)
- 10: Damage to the engine by use of low-quality gasoline or gasoline with an octane rating below the minimum level listed will void the warranty on your boat. (Page 6-2)

- 11: Fuels that are blended to contain methanol or wood alcohol are not to be used in MasterCraft engines. These fuels can corrode some metal parts in your fuel system and engine. Damage caused by the use of unapproved fuels is not covered by warranty. (Page 6-2)
- 12: Extended storage with fuel in the system can affect the fuel's stability and may require system inspection and fuel filter replacement, when the unit is placed back into service. (Page 6-2)
- 13: Lifting slings must never contact shafts, struts or hardware protruding from the hull. Damage caused by slings will void your warranty. (Page 11-1)
- 14: When your boat is out of the water, it is important to support the hull correctly to avoid any hull damage that will void your warranty. (Page 11-1)
- 15: Crossing cables or jumper cables can result in damage to the electrical components due to incorrect battery connections. Such damages are not covered by your warranty. (Page 15-7)
- 16: Attention must be paid to any leakage occurring in the propeller shaft log area. Water intrusion into the transmission, which can happen if excessive leakage is occurring, can cause serious damage and void your warranty. (Page 15-5)
- 17: Allowing the fuel level in the fuel tank to fall below one-quarter of a tank full may affect the reliability of the fuel pump or result in damage to the fuel pump, which is not covered under warranty. (Page 6-2)



Table of Contents

Boating Safety	1-1	Clean Engine Flame Arrestor.....	15-10
Common Sense Approach.....	2-1	Replace Raw Water Pump Impeller	15-12
Rules of the Open Water.....	3-1	Engine Tune-Up.....	15-12
Guide to Individual Models	4-1	Change Transmission Fluid	15-12
Engine & Propeller Specifications	4-3	Check Engine Mounts	15-13
Controls and Indicators	5-1	Check Propeller Shaft Coupling Alignment.....	15-13
Using Care While Fueling	6-1	Inspect Exhaust Flaps	15-13
Safety Checks and Services	7-1	Lubricate Steering System	15-13
New Boat Break-In	8-1	Lubricate Shift and Throttle System	15-14
Starting and Basic Operations	9-1	Ballast Pump Impeller	15-14
Operational Hints.....	10-1	Inspect Complete Fuel System for Leakage	15-14
Lifting the Boat.....	11-1	Emissions	16-1
Corrosion	12-1	Storage/Winterization	17-1
Cleaning.....	13-1	General Preparation	17-1
Scheduled Maintenance Checks & Services	14-1	Fuel System Treatment	17-1
Before Each Use.....	15-1	All Engines	17-2
Transmission Cooler.....	15-1	Raw-Water Cooled Engines	17-2
Coolant Level.....	15-1	Fresh-Water Cooled Engines	17-3
Alternator Belt.....	15-2	Drive Train Preparation.....	17-3
Battery Connections and Hold-Downs	15-2	General Power Package Preparation	17-3
Loose or Missing Hardware	15-3	Other Winterization Preparation.....	17-3
Cable Kinks, Wear and Interference	15-4	Ballast System Preparations.....	17-4
Impeller.....	15-4	Reactivating After Storage	17-4
Propeller Shaft Log	15-5	Unscheduled Maintenance	18-1
Fuel System Leaks	15-5	Checking/Repairing Propellers.....	18-1
Exhaust System Leaks	15-6	Changing Propellers	18-1
Fully Charged Battery	15-6	Checking Speedometer Calibration	18-1
Engine Oil Level	15-7	Troubleshooting.....	19-1
Transmission Fluid Level.....	15-8	Limited Warranty Statement	20-1
Quarterly Maintenance	15-8	Warranty Transfer	21-1
Engine Starter Gear and Shaft Lubrication	15-8	Team MasterCraft.....	22-1
Change Engine Oil	15-9	Genuine MasterCraft Parts.....	23-1
Annual Maintenance	15-10	Service Log.....	24-1



Boating Safety

Your safety, as well as the safety of others with and around you, is a direct result of how you operate and maintain your boat. Read and comprehend this manual. Make sure that you understand all the controls and operating instructions before attempting to operate the boat. Improper operation is extremely dangerous!

The basic safety rules are outlined in this section of the manual. Additional precautions throughout the manual are noted by the following symbols:



This is the safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.



DANGER indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury.



WARNING indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.



CAUTION indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury.



CAUTION used without the safety alert symbol indicates a potentially hazardous situation which, if not avoided, may result in property damage.

The precautions listed in this manual and on the boat are not all-inclusive. If a procedure, method, tool or part is not specifically recommended by MasterCraft, using it may place you and others in an unsafe situation; as well, you may render your warranty void. Remember: Always use common sense when operating, servicing or repairing the boat!

In addition to everyday safety, failure to observe the safety recommendations may result in severe personal injury or death to you or to others. Use caution and common sense when operating your boat. Don't take unnecessary chances!

General Precautions

Be certain that all boat operators are aware of this information and conform to boat safety principles.

Boating safety starts with a thorough understanding of operation. In addition to careful review of this manual, you should be aware as well that there are many sources of information available. MasterCraft urges you to pursue additional training.

The following is a listing of just some of the agencies and organizations that offer safety training or information.

American Red Cross, National HQ
8111 Gatehouse Road, 6th Floor
Falls Church VA 22042
(202) 737-8300
www.redcross.org

USA Water Ski Association
1251 Holy Cow Road
Polk City FL 33868
(863) 324-4341
<http://www.usawaterski.org>



Boat Owners Association of the United States
880 South Pickett Street
Alexandria VA 22304
(703) 823-9550
<http://www.boatus.com>

National Safe Boating Council
2550 M Street NW, Suite 425
Washington DC 20037
(202) 296-4588
www.safeboatingcouncil.org

U.S. Coast Guard Auxiliary
2100 Second Street SW
Washington DC 20593-001
(202) 267-1001
<http://www.uscg.mil>



Safety Equipment

Federal law requires certain safety equipment to be on-board at all times. In addition, responsible boaters carry other equipment in case of emergency. Check with the local boating authorities for any additional requirements over and above the federal stipulations.

Required Equipment

Your MasterCraft has been equipped at the factory with most of the federally required safety equipment for inland waters (Class I, 16-foot-to-26-foot watercraft). This equipment includes:

- ABYC-approved marine mufflers with water injection;
- USCG-approved marine flame arrestor;
- USC-approved engine box ventilation with spark-less power blower;
- ABYC-approved electric horn sound-warning device;
- USCG-approved inland lighting.

Additionally, you should always check that you have onboard a fire extinguisher, which is mandatory equipment and sold as an optional purchase from the factory.

Federal law also requires at least one Type I, II or III Personal Flotation Device (PFD) for each person on-board or being towed on water skis or other recreational equipment. In addition, one throwable Type IV PFD must also be on board. As the owner, obtaining the appropriate PFDs is your responsibility. Your MasterCraft dealer can—and will be—happy to assist you.

Note: Requirements for coastal waters and inland waters differ. Check with the local authorities for more information.

Recommended Equipment

A smart boat owner will avoid potential problems on an outing by having additional equipment on board. Normally, the decision regarding which equipment to take is dependent on the body of water and the length of the trip. We suggest the following as a minimum. Your MasterCraft dealer can also assist you with additional recommendations.

- An anchor with at least 75 feet of line;
- A manual bailing device for removing water;
- A combination oar/boat hook;
- A day-and-night visual distress signal;
- A first aid kit and manual;
- An airway breathing tube;
- A waterproof flashlight;
- A horn or whistle, non-electric;
- A set of local navigational charts
- Mooring lines and fenders;



- Extra engine oil;
- A tool kit;
- A portable, battery-operated AM/FM radio.

Safety Afloat

Boating-related accidents are generally caused by the operator's failure to follow basic safety rules or written precautions. Most accidents can be avoided if the operator is completely familiar with the boat, its operation, and can recognize potentially hazardous situations before an accident occurs.



Failure to comply with safety-related information and instructions may result in serious injury or death to you and/or others. Always use common sense when operating the boat or participating in any activities associated with the boat.

- Improper operation is extremely dangerous. Operators must read and understand all operating manuals supplied with the boat, before operation.
- On-board equipment must always conform to the governing federal, state and local regulations.
- Always attach the engine safety shut-off lanyard to a part of your clothing, such as a belt loop, when operating the boat.



Never override or modify the engine safety shut-off switch or engine neutral starting safety switch in any way.

- Never operate the boat while under the influence of alcohol or drugs.
- Never stand or allow passengers to stand in the boat—or sit on the motor box—while underway. You or others may be thrown from the boat.
- Prior to starting the engine, you must open the engine box and check the engine compartment and bilge for gasoline and oil vapors. You must also operate the blower for at least four (4) minutes. Failure to do may result in fire or explosion.
- Never remove or modify any components of the fuel systems, except for maintenance and repair performed by qualified MasterCraft personnel. Tampering with fuel components may cause a hazardous situation and voids the warranty.
- Never allow any type of spark or open flame on board. It may result in fire or explosion.

Skiing & Wakeboarding Safety

Skiers and wakeboarders are obligated to be as aware of the fundamental safety rules as operators must be. If you are new to water skiing, seek certified training before starting. You will find it especially helpful to join a local ski club and the USWSA, when possible.

- Always remember that the majority of water-skiing and wakeboarding injuries are the result of impacts with other objects, so always look where you are going and be aware of what is going on around you.
- Never put your arm, head or any other part of your body through the handle/bridle of the ski line nor wrap the line around any part of the body at any time.
- Never ski at night, or directly in front of other boats.
- Folding a tower requires two people.



WARNING

Towers on boats are intended for use in wakeboarding only. Use of the tower to tow other boats, kites or any other purpose may result in serious injury or death, and may damage the boat, which will not be covered by warranty.

- Never jump from a boat that is moving at any speed, nor enter or exit the water when the engine is running (ON).
- Make sure that everyone knows and uses approved skiing hand signals and common skiing courtesy.
- Never ride on the ski platform or hold on to the platform while in the water during engine operation, including at idle. Carbon monoxide fumes are expelled from the lower transom areas of a boat and can cause serious illness or even death.
- The above recommendations are not all-inclusive. It is the boater's responsibility to operate the boat in a safe fashion and become familiar with any and all rules and laws governing boat operation.

DANGER

Do not tow more than two persons at one time on a tow tower. The tow tower should be used only for water skis, wakeboards, or recreational towables and not for parasailing, kite flying or towing other boats. Do not add any attachments that are not installed by MasterCraft. Do not climb on, sit on, stand on, jump off or dive off the tower. Never allow passengers to sit behind the tow rope attachment point. Never allow loose tow rope ends to dangle. Always be certain that all bolts are in place and tight before and during use. When the tower is up, watch for low obstacles such as tree limbs, bridges or power lines.

Warning Plates and Label

Read and note ALL warning plates and labels from bow to stern! **YOU MUST READ AND ADHERE TO ALL CAUTIONS AND WARNINGS IN AND ON YOUR BOAT!**



Common Sense Approach



This manual has been developed to help ensure an enjoyable experience as you boat, wakeboard and ski with your MasterCraft boat. As stated earlier, this information is not all-inclusive. There are many other factors to consider and additional information that you need to research before undertaking any boating.

Beyond the study involved, you should also always use common sense when boating. For example, when anchoring your boat so that you can enjoy swimming, you **MUST** turn the engine OFF. Exhaust fumes are emitted from the exhaust flap area of the transom, immediately below the swim platform. No one should ever be on the swim platform or transom.

MasterCraft also strongly encourages individuals to wear Personal Flotation Devices (PFDs). In many states, it is a legal requirement for children to wear them. Non-swimmers of any age should never be without one.

Your MasterCraft boat can be the source of countless hours of family fun and building friendships. But it works only if YOU use your head before, during and after your boating.

Now, finish reading this manual and then go out there and **HAVE SOME FUN!**



Carbon monoxide is a colorless, tasteless, odorless and poisonous gas that accumulates rapidly and can cause serious injury or death. Exposure to carbon monoxide can be fatal in a matter of minutes. Exposure to even low concentrations of carbon monoxide must not be ignored because the effects of exposure to carbon monoxide are cumulative and can be just as lethal as at high concentrations. Carbon monoxide from exhaust pipes of inboard or outboard engines may build up inside and outside the boat in areas near exhaust vents. STAY AWAY from these exhaust vent areas, which are located at the stern of the boat, and DO NOT swim or engage in any watersports or other activities in or near the stern area of the boat, including, without limitation, the swim platform and the rear sun deck, when the engine is in operation. Under no circumstances should “teak surfing” or similar activities be performed during the operation of your MasterCraft boat—such activities are a misuse of this product.

Rules of the Open Water

Just as there are rules that apply when driving a vehicle on the street, there are waterway rules that apply when you are driving a boat. These rules are used internationally, and they are enforced by the United States Coast Guard and local agencies. You should be aware of these rules and follow them whenever you encounter another vessel on the water.

In various geographic locations certain rules prevail that may be unique to the locale, but all are basically the same as the International Rules of the Road.

The rules presented in this manual are condensed and have been provided as a convenience only. Consult your local U.S. Coast Guard Auxiliary (USCGA), Department of Motor Vehicles (DMV) or Department of Natural Resources (DNR) for a complete set of rules governing the waters in which you will be using your boat. If you plan to travel—even for a short trip—you would be well-served to contact the regional USCGA, DMV or DNR in the area where you will be boating.

Steering and Sailing Rules/Sound Signals

Any time two vessels on the water meet one another, one vessel has the right-of-way. It is called the **stand-on vessel**. The vessel that does not have the right-of-way is called the **give-way** or **burdened vessel**.

These rules determine which vessel has the right of way, and accordingly, what each vessel should do.

The vessel with the right-of-way has the duty to continue its course and speed, except to avoid an immediate collision. When you maintain your direction and speed, the other vessel will be able to determine how best to avoid you.

The vessel that does not have the right-of-way has the duty to take positive and timely action to stay out of the way of the stand-on vessel. Normally, the give-way vessel should not cross in front of the stand-on vessel. Slow down or change direction briefly and pass behind the other vessel. You should always move in such a way that the stand-on operator can see what you are doing.

The General Prudential Rule

This rule is called Rule 2 in the International Rules and says, "In obeying and construing these rules due regard shall be had to all dangers of navigation and collision, and to any special circumstances, which may render a departure from the above rules necessary in order to avoid immediate danger."

Rules When Encountering Vessels

There are three main situations in which you may encounter other vessels and you must avoid a collision. These are:

- **Meeting** (you are approaching another vessel head-on).
- **Crossing** (you are traveling across the other vessel's path).
- **Overtaking** (you are passing or being passed by another vessel).

Using the adjacent image in which you are the boat in the center, you should give right-of-way to all vessels showing in the white area. In this instance, you are the give-way vessel. Both you and the meeting vessel must alter course to avoid each other.



Meeting

If you are meeting another power vessel head-on, and you are close enough to run the risk of collision, neither of you has the right-of-way. Both of you should alter course to avoid an accident. You should keep the other vessel on your port (left) side. This rule doesn't apply if both of you can clear each other by continuing your set course and speed.

Crossing

When two power-driven vessels are crossing each other's path close enough to run the risk of collision, the vessel that views the crossing vessel to the starboard (right) side must give-way.


If the other vessel is to the port (left) side, maintain your course and direction, provided the other vessel gives you the right-of-way as it should.

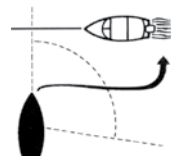

Overtaking

If you're passing another vessel, you are the give-way vessel. This means that the other vessel is expected to maintain its course and speed. You must stay out of its way as you clear it, altering course and speed as necessary.

Conversely, if you are being passed by another vessel, you should maintain your speed and direction so that the vessel can steer itself around you.



Other Special Situations

There are other rules to always remember when driving your boat around other vessels:

When navigating in narrow channels, you should keep to the right when it is safe and practical to do so.

If the operator of a power-driven vessel is preparing to go around a bend that may obstruct the view of other water vessels, the operator should sound a prolonged blast on the whistle or horn for four to six seconds.

If another vessel is around the bend, it too should sound the whistle or horn. Even if no reply is heard, the vessel should still proceed around the bend with caution.

Sailing Vessel Right-of-Way

Sailing vessels should normally be given the right-of-way. The exceptions to this are:

When the sailing vessel is overtaking the power-driven vessel, the power-driven vessel has the right of way.

Sailing vessels should keep clear of any fishing vessel.

In a narrow channel, a sailing vessel should not hamper the safe passage of a power-driven vessel that can navigate only in such a channel.

Fishing Vessel Right-of-Way

All vessels that are fishing with nets, lines or trawls are considered under international rules to be fishing vessels. Boats with trolling lines are not considered fishing vessels.

Fishing vessels have the right-of-way, regardless of position. But these vessels cannot impede the passage of other vessels in narrow channels.

Reading Buoys and Other Markers

The waters of the United States are marked for safe navigation by the lateral system of buoyage. The markers and buoys you will encounter have an arrangement of shapes, colors, numbers and lights to show which side of the buoy a boater should pass when navigating in a particular direction.

The markings on these buoys are oriented from the perspective of being entered from seaward while the boater is going toward the port. This means that red buoys are passed on the starboard (right) side when proceeding from open water into port, and the green buoys are to the port (left) side. When navigating out of port, your position to the buoys should be reversed: red buoys to port and green buoys to starboard.

Many boating bodies of water are entirely within the boundaries of a single state. The Uniform State Waterway Marking Systems have been devised for these waters. This system uses buoys and signs with distinctive shapes and colors to show regulatory or advisory information. These markers are white with black letters and orange borders. The information signifies speed zones, restricted areas, danger areas and general information.

Remember: Markings may vary by geographic location. Always consult local boating authorities before driving your boat in unfamiliar waters.



Guide to Individual Models

Model	Feature	Located
ProStar 190, ProStar 197, X-1, X-7	Battery	Beneath observer seat
MariStar 200, X-2, MariStar 230, X-30, MariStar 280, X-80	Batteries	Beneath rear port seat
MariStar 245, X-45	Batteries	Beneath rear starboard seat
X-Star	Batteries	Beneath rear port and starboard seats
All Models	Blower Exhaust	Transom
All Models	Bow Light(s)	Forward top of bow deck
All Models	Circuit Breakers	Beneath instrument panel; additional breakers may be near battery box
ProStar 190, ProStar 197, X-7	Drain Plug	Access through deck forward of engine compartment
MariStar 200, X-1, X-2, MariStar 230, X-30, MariStar 245, X-45, MariStar 280, X-80, X-Star	Drain Plug	Access through deck mid-ship, forward of rear seating
ProStar 190, ProStar 197, X-7	Engine compartment	Amidship center of deck
MariStar 200, X-1, X-2, MariStar 230, X-30 MariStar 245, X-45, MariStar 280, X-80, X-Star	Engine compartment	Aft, beneath sun deck
ProStar 190, ProStar 197, X-7	Fuel tank filler	Outside port rear
MariStar 200, X-1, X-2	Fuel tank filler	Outside starboard rear
MariStar 230, X-30, MariStar 245, X-45, MariStar 280, X-80, MariStar 280 STS, X-Star	Fuel tank fillers	Outside both port and starboard rear
All models	Glove box	Forward of observer seat
All models	Instrument panel	Forward of driver's seat
MariStar 200, X-1, X-2	Ski locker	Center walk-thru to bow
ProStar 190, ProStar 197, X-7, X-1, MariStars	Stern light receptacle	Top of starboard rear deck near sun pad
All Models	Swim platform	Attached to transom
All models	Throttle/shift control	Starboard side panel beside driver's seat

Instrument Panel

ProStar 109, ProStar 197, X-1, X-7

Top row of gauges from left:

Oil pressure gauge
Engine temperature gauge
Speedometer
Multi-function/tachometer
Check engine light
Speedometer or Perfect Pass
Voltmeter
Fuel gauge

Lower left panel:

Horn
Accessory 1 switch
Accessory 2 switch
Courtesy lights switch
Lower right panel:
Speedo adjustment switch
Clock adjustment switch
Nav/anchor lights switch
Bilge pump switch
Blower switch
Ignition key slot

Engine temperature gauge
Multi-function/tachometer
Speedometer
Perfect Pass or MC Cruise
Fuel gauge
Voltmeter

Lower left panel:

Horn
Accessory 1 switch
Accessory 2 switch
Accessory 3 switch
Courtesy lights switch
12-volt receptacle

Lower right panel:

Speedo adjustment switch
Display selector switch
Speedo adjustment switch
Nav/anchor lights switch
Forward bilge switch
Aft bilge switch
Blower switch
Ignition key slot

X-Star, MariStar 280, X-80

Top row of gauges from left:

Tachometer
Speedometer
Perfect Pass gauge
Middle left panel:
Oil pressure gauge
Engine temperature gauge
Clock

Middle right panel:

Voltmeter
Depth finder
Fuel gauge

Lower left panel:

Horn
Clock adjustment switch
Speedometer adjustment switch
Courtesy lights switch
Shower switch
Heater switch
Accessory 1 switch
Accessory 2 switch
Accessory 3 switch
Lower right panel:
Tower light switch
Blower switch
Bilge switch
Nav/anchor lights switch
Ignition switch

MariStar 280 STS

Upper panel:

Multi-function/tachometer (port engine)
Fuel gauge
Speedometer
Depth finder
Multi-function/tachometer (starboard engine)

Middle left panel:

Water temperature gauge (port engine)
Oil pressure gauge (port engine)
Voltmeter (port engine)

Middle right panel:

Water temperature gauge (starboard engine)
Oil pressure gauge (starboard engine)
Voltmeter (starboard engine)

Lower left panel:

Horn
Ignition switch (port engine)
Courtesy lights switch
Shower switch
Heater switch
Hatch switch
Starboard ballast switch
Port ballast switch

Lower right panel:

Tower light switch
Center bilge pump switch
Wash down switch
Blower switch
Forward/aft bilge pump
Nav/anchor lights
Ignition switch (starboard engine)
Multi-function toggle switch (port engine)
Multi-function toggle switch (starboard engine)
Speedometer calibration

MariStar 200, MariStar 230, MariStar 245, X-2, X-30, X-45

Top row of gauges from left:

Oil pressure gauge

Engine and Propeller Specifications

Boat	Engine	Trans.	Shaft	Propeller
ProStar 190 & 197, X-7	RTP-1	1:1	49"x1 1/8"	12.5"x12"
ProStar 190 & 197, X-7	RTP-1	1.5:1	51"x1 1/8"	13.7"x17"
ProStar 190 & 197, X-7	MCX	1:1	49"x1 1/8"	12.5"x12"
ProStar 190 & 197, X-7	MCX	1.5:1	51"x1 1/8"	13.7"x17"
ProStar 190 & 197, X-7	6.0L	1:1	49"x1 1/8"	12.5"x13"
ProStar 190 & 197, X-7	6.0L	1.5:1	49.5"x1 1/8"	13.7"x19.5"
ProStar 190 & 197, X-7	8.1L	1.5:1	48 1/8"x1 1/8"	14.5"x22"
X-1	RTP-1	1.5:1	52 1/2"x1 1/8"	13.7"x17"
X-1	MCX	1.5:1	52 1/2"x1 1/8"	13.7"x17"
MariStar 200, X-2	RTP-1	1.5:1	52 1/2"x1 1/8"	13.5"x17"
MariStar 200, X-2	MCX	1.5:1	52 1/2"x1 1/8"	13.5"x17"
MariStar 200, X-2	6.0L	1.5:1	52 1/2"x1 1/8"	13.7"x19.5"
MariStar 200, X-2	8.1L	1.5:1	52 1/2"x1 1/8"	14.5"x22"
MariStar 230, X-30	RTP-1	1.5:1	52 1/2"x1 1/8"	13.5"x17"
MariStar 230, X-30	MCX	1.5:1	52 1/2"x1 1/8"	13.5"x17"
MariStar 230, X-30	6.0L	1.5:1	52 1/2"x1 1/8"	13.7 x19.5"
MariStar 230, X-30	8.1L	1.5:1	52 1/2"x1 1/8"	14.5"x22"
MariStar 245, X-45	MCX	1.5:1	52 1/2"x1 1/8"	13.7"x17"
MariStar 245, X-45	6.0L	1.5:1	52 1/2"x1 1/8"	13.7"x19.5"
MariStar 245, X-45	8.1L	1.5:1	52 1/2"x1 1/8"	14.5"x22"
MariStar 280, X-80	MCX	1.5:1	52 1/2"x1 1/8"	13.7"x17"
MariStar 280, X-80	6.0L	1.5:1	52 1/2"x1 1/8"	13.7"x19.5"
MariStar 280, X-80	8.1L	1.5:1	52 1/2"x1 1/8"	14.5"x22"
X-Star	RTP-1	1.5:1	52 1/2"x1 1/8"	13.5"x17"
X-Star	MCX	1.5:1	52 1/2"x1 1/8"	13.5"x17"
X-Star	6.0L	1.5:1	52 1/2"x1 1/8"	13.7"x19.5"
X-Star	8.1L	1.5:1	52 1/2"x1 1/8"	14.5"x22"
MariStar 280STS	RTP-1	1.5:1	52 1/2"x1 1/8"	13.7"x19.5" cc LH 13.7"x19.5" cc RH
MariStar 280STS	MCX	1.5:1	52 1/2"x1 1/8"	13.7"x19.5" cc LH 13.7"x19.5" cc RH

MasterCraft Power Vortec RTP-1 5.7L multi-port EFI 350-cubic-inch GM V-8 Engine

Displacement.....	350 C.I.D. (5.7 litres)—310 horsepower
Bore.....	4.00"
Stroke.....	3.48"
Compression Ratio.....	9.4:1
Compression Pressure.....	100 PSI minimum
Maximum Allowable Compression Variation.....	Highest to lowest within 70%
Maximum Allowable RPM at WOT.....	4500-5000 RPM
Oil Pressure (Hot).....	20 PSI at 2000 RPM
Propshaft Rotation.....	Left-hand
Fuel Requirement.....	89 Octane minimum
Fuel Pressure: Operating Pressure.....	53-58 PSI
Fuel Pump Volume.....	1 pint in 20 seconds
Type of Fuel Induction.....	Marine Electronic Fuel Injection Direct
.....	Port Type
Electrical System.....	12 Volt
Ignition Type.....	Distributor HEI
Electronic Control Module.....	Delco Electronics Waterproof Marine
.....	Controller (MEFI 5)
Alternator Output Rating.....	70 amps at 2000 RPM
Thermostat.....	160 degrees
Spark Plug Type.....	AC41-932
Recommended Plug Gap.....	0.060"
Firing Order.....	1-8-4-3-6-5-7-2
Minimum Battery Rating.....	750 cold cranking amps for 30 seconds
.....	At 0 degrees Fahrenheit or better
Oil Capacity.....	4-5 quarts with filter change—verify with dipstick
Oil Type.....	SAE 15W40, CG-SJ4
Oil Filter Type.....	PF25 or PZ3
Transmission Fluid Capacity.....	1 ½ to 2 qts. Dextron 3 transmission fluid
.....	with 1:1 transmission; 2 ½ to 3 qts 15W40 motor oil with
.....	1.5:1 Transmission; 4-5 qts. SAE 15W40 Motor oil with V-drive transmission
Initial Timing.....	10 degrees BTCD at 1000 RPM fixed;
.....	Factory set—not field adjustable
Total Ignition Advance.....	Varies as a function of input information
Cylinder Numbering Front to Rear.....	Right bank 1-3-5-7; left bank 2-4-6-8



MasterCraft Power Vortec MCX 5.7L multi-port EFI 350-cubic-inch GM V-8 engine

Displacement.....	350 C.I.D. (5.7 litres)—350 horsepower
Bore.....	4.00"
Stroke.....	3.48"
Compression Ratio.....	9.4:1
Compression Pressure.....	100 PSI minimum
Maximum Allowable Compression Variation.....	Highest to lowest within 70%
Maximum Allowable RPM at WOT.....	4800-5200 RPM
Oil Pressure (Hot).....	20 PSI at 2000 RPM
Propshaft Rotation.....	Left-hand
Fuel Requirement.....	89 Octane minimum
Fuel Pressure: Operating Pressure.....	53-58 PSI
Fuel Pump Volume.....	1 pint in 20 seconds
Type of Fuel Induction.....	Marine Electronic Fuel Injection Direct
.....	Port Type
Ignition Type.....	Distributor HEI
Electronic Control Module.....	Delco Electronics Waterproof Marine Controller (MEFI 5)
Alternator Output Rating.....	90 amps at 2000 RPM
Thermostat.....	160 degrees
Spark Plug Type.....	AC41-932
Recommended Plug Gap.....	0.060"
Firing Order.....	1-8-4-3-6-5-7-2
Minimum Battery Rating.....	750 cold cranking amps for 30 seconds at
.....	0 degrees Fahrenheit or better
Oil Capacity.....	4.5 quarters with filter change—verify with dipstick
Oil Type.....	SAE 15W40, CG-SJ4
Oil Filter Type.....	PF25 or PZ3
Transmission Fluid Capacity.....	1 ½ to 2 qts. Dextron 3 transmission fluid
.....	with 1:1 transmission; 2 ½ to 3 qts 15W40 motor oil with
.....	1.5:1 Transmission; 4-5 qts. SAE 15W40 Motor oil with V-drive transmission
Initial Timing.....	10 degrees BTCD at 1000 RPM fixed;
.....	Factory set—not field adjustable
Total Ignition Advance.....	Varies as a function of input information
Cylinder Numbering Front to Rear.....	Right bank 1-3-5-7; left bank 2-4-6-8




MasterCraft Power LY6 multi-port EFI 6.0 Liter V-8 Engine

Displacement	364 C.I.D. (6.01 litres)—400 horsepower
	At 5200 RPM
Bore	3.898"
Stroke	3.623"
Compression Ratio	10:1
Cylinder Head Material	Cast Iron
Block Material	Cast Iron
Compression Pressure	100 PSI minimum
Maximum Allowable Compression Variation	Highest to lowest within 70%
RPM Range at WOT	5200-5600 RPM
Oil Pressure (Hot)	20 PSI at 2000 RPM
Propshaft Rotation	Left-hand
Fuel Requirement	93 Octant (R+M)/2 (RFG acceptable)
Fuel Pressure: Operating Pressure	53-58 PSI
Fuel Pump Volume	1 pint in 20 seconds
Type of Fuel Induction	Marine Electronic Fuel Injection Phased Port Type
Electronic Control Module	Delco Electronics Waterproof Marine Controller (MEFI 5A)
Ignition System	Coil near plug
Alternator Output Rating	90 amps at 2000 RPM
Thermostat	160 degrees
Spark Plug Type	AC41-985
Recommended Plug Gap	0.050"
Firing Order	1-8-7-2-6-5-4-3
Minimum Battery Rating	750 cold cranking amps for 30 seconds at 0 degrees Fahrenheit or better
Oil Capacity	5.5 quarters with filter change—verify with dipstick
Oil Type	SAE 15W40, SJ, CG4, CH4
Oil Filter Type	AC PF 25 or PZ3
Transmission Fluid Capacity	2 1/2 to 3 qts 15W40 motor oil with 1.5:1 Transmission; 4-5 qts. SAE 15W40 Motor oil with V-drive transmission
Initial Timing	Factory set and computer controlled—not field adjustable
Total Ignition Advance	Varies as a function of input information
Cooling System—Engine	Raw Water Cooled
Cooling System—Engine Oil/Transmission	Raw Water—Full Flow Tandem



MasterCraft Power Vortec L-18 multi-port EFI 496-cubic-inch GM V-8 Engine

Displacement	496 C.I.D. (8.1 Litres)—425 horsepower
Bore	4.25"
Stroke	4.37"
Compression Ratio	9.1:1
Compression Pressure	100 PSI minimum
Maximum Allowable Compression Variation	Highest to lowest within 70%
Maximum Allowable RPM at WOT	5000-5400 RPM
Oil Pressure (Hot)	10 PSI minimum at 2000 RPM
Propshaft Rotation	Left-hand
Fuel Requirement	89 Octane
Fuel Pressure: Operating Pressure	53-58 PSI
Fuel Pump Volume	1 pint in 20 seconds
Type of Fuel Induction	Marine Electronic Fuel Injection Direct Port Type
Electrical System	12 Volt
Ignition Type	Distributorless—Coil Near Plug
Electronic Control Module	Delco Electronics Waterproof Marine Controller (MEFI 4)
Alternator Output Rating	90 amps at 2000 RPM
Thermostat	160 degrees
Spark Plug Type	AC 41-983
Recommended Plug Gap	0.050"
Firing Order	1-8-7-2-6-5-4-3
Minimum Battery Rating	750 cold cranking amps for 30 seconds at 0 degrees Fahrenheit or better
Oil Capacity	8 quarts with filter change—verify with dipstick
Oil Type	SAE 40, CG-SJ4
Oil Filter Type	PF454
Transmission Fluid Capacity	4.5 quarts SAE 15W40 Motor Oil
Initial Timing	10 degrees BTDC at 1000 fixed RPM; Factory set—not field adjustable
Total Ignition Advance	Varies as a function of input information
Cylinder Numbering Front to Rear	Right bank 1-3-5-7; left bank 2-4-6-8

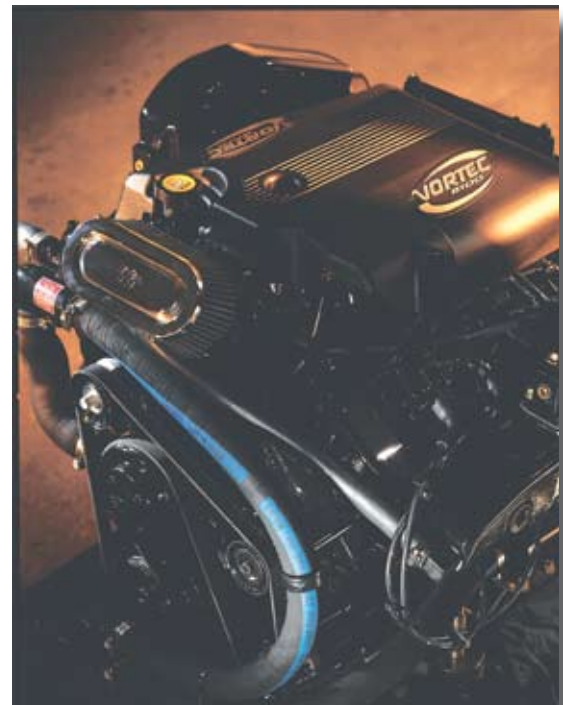

ProStar 190

Length of Boat.....	19'8"
Width Amidship.....	91"
Boat Weight.....	2,620 lbs.
Length of Boat w/Platform.....	1'6"
Towing Length.....	22"
Towing Width.....	100"
Fuel Capacity.....	31 gallons
Total Weight Capacity.....	6 people or 900 lbs.

ProStar 197, X-7

Length of Boat.....	19'8"
Width Amidship.....	91"
Boat Weight.....	2,620 lbs.
Length of Boat w/Platform.....	21'6"
Towing Length.....	22'
Towing Width.....	100"
Fuel Capacity.....	31 gallons
Total Weight Capacity.....	6 people or 900 lbs.

X-1

Length of Boat.....	20'7"
Width Amidship.....	90"
Boat Weight.....	3,050 lbs.
Length of Boat w/Platform.....	2'6"
Towing Length.....	22'
Towing Width.....	96"
Fuel Capacity.....	33 gallons
Total Weight Capacity.....	11 people or 1,615 lbs.

MariStar 200, X-2

Length of Boat.....	20'1"
Width Amidship.....	96"
Boat Weight.....	3,350-3,500 lbs.
Length of Boat w/Platform.....	22'1"
Towing Length.....	22'6"
Towing Width.....	100"
Fuel Capacity.....	45 gallons
Total Weight Capacity.....	11 people or 1,609 lbs.

MariStar 230, X-30

Length of Boat.....	22'5"
Width Amidship.....	102"
Boat Weight.....	3,900 lbs.
Length of Boat w/Platform.....	24'8"
Towing Length.....	23'10"
Towing Width.....	100"
Fuel Capacity.....	60 gallons
Total Weight Capacity.....	16 people or 2,475 lbs.

MariStar 245, X-45

Length of Boat.....	24'2"
Width Amidship.....	109"
Boat Weight.....	34,730 lbs.
Length of Boat w/Platform.....	26'4"
Towing Length.....	26'1"
Towing Width.....	100"
Fuel Capacity.....	90 gallons
Total Weight Capacity.....	18 people or 2,928 lbs.

MariStar 280, X-80

Length of Boat.....	28'3"
Width Amidship.....	114"
Boat Weight.....	5,450 lbs.
Length of Boat w/Platform.....	28'3"
Towing Width.....	114"
Fuel Capacity.....	100 gallons
Total Weight Capacity.....	15 people

X-Star

Length of Boat.....	22'3"
Width Amidship.....	100"
Boat Weight.....	4,520 lbs.
Length of Boat w/Platform.....	24'6"
Towing Length.....	23'8"
Towing Width.....	100"
Fuel Capacity.....	53 gallons
Total Weight Capacity.....	12 people or 1,770 lbs.

MariStar 280 STS

Length of Boat.....	28'3"
Width Amidship.....	114"
Boat Weight.....	6,200 lbs.
Length of Boat w/Platform.....	28'3"
Towing Width.....	114"
Fuel Capacity.....	100 gallons
Total Weight Capacity.....	15 people

Controls and Indicators



While the *Guide to Individual Models* provides specific information regarding the location of individual gauges and switches for each MasterCraft model, there is some general information about various gauges that has a direct impact on the operation and maintenance of your boat. The following includes information that should be reviewed and recalled on a regular basis.

Multi-Function Gauge

This gauge provides several functions of interest and support to the boater. As a **ta-****chometer**, it indicates the engine speed in crankshaft revolutions per minute (RPM). Propeller shaft RPM is the same as the engine rotation except for boats equipped with the Power Slot 1.5:1 ratio package or

a V-drive gear, in which case propeller shaft RPM is less than that of the engine RPM.

Toggle to the **hourmeter** and it registers the accumulated engine operating time. Use the hourmeter to keep accurate logs for scheduled maintenance. Replacing the computer (known as the MMDC) will erase the hours. It counts hours only when the engine is above 300 RPM. When equipped with a revision C MMDC, the option exists to change the display to metric from the hours screen. This is done by holding down the gauge selection display button for three seconds. When prompted, select English or metric display. Wait an additional three (3) seconds and the display will return to normal operation.

Toggle to the **air temperature gauge** (optional) to get an approximate reading of the ambient air temperature above the water's surface.

Toggle to the **clock** for the convenience of determining the time.

Making Use of the Multi-Function Gauge

In addition to the displays noted, the multi-function gauge also displays several alarms. The following messages will be displayed if an alarm occurs:

VOLT = Below 11.5 volts

OIL = Oil is below 4 p.s.i. when the RPM is below 1000 RPM or the oil pressure is below 10 p.s.i. and above 1000 RPM.

TEMP = High engine temperature alarm

TRAN = Transmission alarm

The **hourmeter** displays the boat hours and is stored in the engine's computer. Replacing the computer (known as an MMDC) will erase the hours. It counts hours only when the engine is above 300 RPM. When equipped with a revision C MMDC, the option exists to change the display to metric from the hours screen. This is done by holding down the gauge selection display button for three seconds. When prompted select English or metric display. Wait an additional three seconds and the display will return to normal operation.

The **clock** can be adjusted by depressing the gauge selection display button when the clock is displayed. After three seconds the colon will stop flashing and the hours are adjusted by pressing down, while minutes are adjusted by pressing up. After three additional seconds the clock will return to normal operation.

Lake temperature is also standard on the gauge. This comes from the paddle wheel located under the boat. If the sensor becomes open or shorts-out to the battery it will read 32 degrees F. If the sensor is shorted to ground it will read 150 degrees F. The temperature is also where the *SELF TEST* is located. With the lake temperature displayed, hold down the gauge selection display button for three seconds or until the self test has started. During the test, all the seg-

ments on the display will light up. Also during the self test, the gauges will re-set, go to mid-scale and then to full-scale. After two sweeps the system returns to normal.

Speedometer

The speedometer indicates the forward speed of the boat in miles per hour (unless your boat is equipped with the kilometers per hour available in the European package).

To calibrate the speedometer you need an accurately measured course of 850 feet and a certified stopwatch accurate to within one-thousandth of a second. To calibrate to AWSA official-tournament rules:

- Approach the course at an indicated 36 miles per hour (MPH). Hold the speed steady and have an observer check the course time with a stopwatch.
- If the course time is between 15.88 and 16.28 seconds, no adjustments are necessary.
- If the course time is not within tolerance, press up or down on the calibration rocker switch to adjust the calibration.

Fuel Gauge

The readings are only approximate. The gauge is activated with the ignition switch. Rocking motion of the boat during normal operation will cause fluctuation of the fuel gauge. For a more accurate reading, make sure that the boat is level and at rest. When the boat is placed into initial operation, do not run the boat below a quarter of a tank until you have refueled several times and have a sense of how long you can operate the boat on the fuel available. Extending usage beyond the known capability may cause the boat to run out of fuel and strand you away from the shore.

Although it may be possible to see fuel in the bottom of the fuel tank, you still may not be able to operate the boat. The fuel pick-up system was designed to avoid introducing the water and debris that inevitably accumulate in the bottom of the tank. Rather than relying on visual inspection, you should pay attention to the fuel gauge.

Further, it is not recommended to allow the fuel to fall below one-quarter of a tank full at any time as it may result in damage to the fueling system. (See the *Fueling* section of this manual.)

Temperature Gauge

The temperature gauge indicates the cooling water temperature inside the engine as measured in degrees Fahrenheit.

The normal operating temperature will range from 140 degrees to 190 degrees. Engines with electronic fuel injection also have a control circuit inside the engine control module that will cause the engine to run at reduced speeds if the module senses that the engine is running too hot. If you notice that your speed has reduced during normal operation without reducing the throttle, monitor your temperature gauge. If the gauge indicates excessive temperatures during operation, slow down immediately and turn off the ignition. This indicates an engine problem that needs to be checked by the dealer!



Continuing to operate the boat while the temperature is above normal operating parameters may cause serious damage to your engine. Damage to your engine resulting from operating the engine in an overheated condition can be costly to repair. Such damage is not covered by your warranty!



Engine Oil Pressure Gauge

The engine oil pressure gauge indicates the pressure of the lubricating oil inside the engine. The average pressure ranges are between 6 pounds-per-square-inch (PSI) at 1000 RPM to 40 PSI or more at cruise-range speeds. A reading of pressure below 5 PSI at 1000 RPM may be caused by a low oil level or other potentially serious problems that result in low oil pressure. If you experience low oil pressure, stop your engine immediately and check your oil level before operating again.

CAUTION

Do not continue to run the engine if the oil pressure is low. If you do, the engine can become so hot that it—or surrounding components—could catch fire. You or others could be burned and the boat seriously damaged. Check your oil level and add an appropriate amount of approved motor oil before operating again or have your boat serviced by your local MasterCraft dealer. Note that damage to your engine from neglected oil problems can be costly to repair. Such damage is not covered by your warranty.

Check Engine Light

The red malfunction indicator Check Engine light is operated from an on-board computer that monitors the operation of your fuel, ignition and engine control systems.

On some models, the Check Engine light should come on when the key is in the ON position and the engine is not running. This is a check to show you that it is working. If it does not come on at all, have it repaired by your MasterCraft dealer right away.

If it stays on—or comes on while you are operating your boat—the computer is indicating that you have a problem. You should take your boat to your MasterCraft dealer for immediate service.

Notice: If you continue to operate your boat with this light on, you could adversely affect the emission control systems on the engine. You could also experience poor fuel economy, and your engine may not run as smoothly. This could lead to costly repairs not covered by your warranty.

Voltmeter

The voltmeter registers the electrical activity necessary to operate your boat. If the battery is low or non-functional, or if various electrical items on the boat, such as stereo equipment, is draining the battery and impacting the boat's ability to function properly, the voltmeter will likely be the first gauge to indicate that an issue is occurring.



Low Voltage Battery Alarm

In the event that the stereo has been functioning when the boat is not ON and running, the voltage drain on the battery can result in difficulties in re-starting the boat. It can also cause intermittent erroneous or fluctuating gauge readings. To avoid this situation, when the voltage level reaches 11.5 volts, the system will shut off the stereo system and sound the alarm for a period of two minutes to give boaters ample time to adjust.

Other Alarms

Sensors check the oil pressure, engine and transmission temperatures. If the system detects readings outside the acceptable range, the system shuts off the stereo (if ON) and

sounds the alarm for a period of one minute. Even after the alarm ceases, the Check Engine light will remain on.

This signals the need to return to shore and seek assistance from your dealer as soon as possible to diagnose and, if necessary, repair the issue.

Ignition Switch

Never leave the ignition switch in the RUN position without the engine running; this will prevent the natural discharge of the battery and result in damage to the starter solenoid.

Note that the STS is equipped with two ignitions, one for each engine and that the engines operate independently of each other.

Safety Switch

The emergency engine safety switch, called the lanyard, is an ignition cut-off switch designed to stop the engine in the event of an operator being thrown from position or moving too far from the helm.


The lanyard is equipped with a hook on one end for attachment to your clothing or PFD, and the opposite end has

a slide that fits over the switch. Be sure that the slide is firmly attached to the switch before starting.

The switch is located near the throttle control box. If the slide is left off or loose, the engine will crank but will not start.



The safety switch lanyard must be attached to the operator whenever the engine is started. Failure to do so may result in serious injury or death.

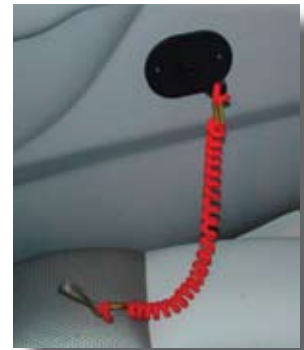

Blower Switch

A two-position rocker switch activates the engine box ventilation blower. Push the top half of the switch to turn the blower ON.

Note: The blower must operate for a minimum of four (4) minutes before starting the engine at any time. The blower must also be operated during idle and slow-speed running, but is not necessary at cruising speed.



Failure to operate the blower as instructed could cause improper ventilation of the boat engine and bilge areas. Fuel vapors can accumulate in this area and cause a fire or explosion which may result in serious injury or death!

Manual and Automatic Bilge Pump Switch

A three-position rocker switch activates the bilge pump. Push the top half of the switch to turn the bilge pump to the manual ON position. Press the switch down to activate the bilge pump for automatic mode while the boat is underway. When the switch is centered, the bilge pump is OFF. The bilge pumps on all V-drive models will be in the automatic mode when the ignition key is turned ON.

On boat models equipped with a ballast system, a three-position switch will allow for the filling or emptying of the ballast tanks and/or bags. It is important to be aware that the engine must operate at 1500 RPM during the fill and empty processes. Failure to do so can result in malfunction or permanent damage to the ballast pumps that force the water through the system. This is not covered under warranty.

Circuit Breakers

All major boat circuits are protected from shorting and overload by re-settable circuit breakers. If a problem develops with one of the following circuits, switch OFF the circuit and wait about one minute. Then push the appropriate breaker button fully and switch ON the circuit. If the circuit continues to trip, there is a problem somewhere that must be attended to immediately. See your MasterCraft dealer.

The location of the main circuit breaker board is under the dash panel. In some models, there is an additional breaker panel to assist with the accessory load, and it is located near the



The main breaker panel is shown above and is located under the dash panel. The waterproof fuse shown below left is for the stereo amplifier, and the additional accessory breaker shown below right is located near the battery box.



battery box. There may also be a waterproof fuse for the stereo amplifier, where equipped. If the boat's accessories are not functional, check and re-set breakers are necessary.

The engines are also equipped with breaker systems. The main 50A circuit breaker protects the engine electrical system and components from overload.

If the engine will not turn over with the battery switch in the ON position, locate the red breaker re-set button (labeled "50") in the engine. There will be an audible click. Try again to start the engine. If the breaker trips again, the engine requires attention. Take your boat immediately to your dealer.

In addition to the 50A circuit breaker, the engines are also equipped with additional component overload protection, including a 15A ATO fuse for the fuel pump, a 15A ATO fuse for the injectors and a 15A ATO fuse for the ECM unit.

If you suspect that any of these fuses may not be operating as designed, you should take your boat to your dealer for attention.

If during maintenance or inspection it becomes necessary to remove or re-position any of the engine's wiring or wire harness(es) verify that the wiring has been returned to its original position and that all harnesses are routed correctly before attempting to use the boat again. If a wiring clip or retainer breaks, replace it immediately. Wiring is specifically routed to eliminate problems related to engine heat and spray or immersion in liquids. Electrical problems can result if wiring is moved from the original position!



Shift/Throttle Control

A one-hand, single-lever control operates as both a gear shifter and a throttle. The lever automatically locks in the neutral position (straight up and down) for safety. The lever can be moved from neutral only by raising the lifter under the ball knob. Shifting is accomplished by moving the lever into the first 45 degrees of travel.

Moving the lever forward engages the running gear; moving it back from center puts the drive train into reverse. By advancing the lever beyond 45 degrees you move from the shifting range to the throttle range.

Never attempt to shift without the engine running!

The shift mechanism of this control can be temporarily disengaged by engaging in the black button in the side of the throttle handle. This allows the engine to increase RPM in neutral during warm-up.

Optional Cruise Control System

On boats equipped with a Cruise Control System, it is possible to review various functions by toggling to the cruise control read-outs on the multi-function gauge explained earlier in this section. Note also that the throttle position must always be greater than the speed set on the cruise control. For example, if the cruise was set at 35 mph but the throttle position is equivalent to 25 mph, the boat will not reach 35. This is also true of the RPMs. Also, the cruise control cannot be engaged when the boat is at idle speed.

System Start-Up: When the ignition is turned on the cruise control system starts in the OFF mode. While it is in OFF mode, the LCD display will show the current time.

RPM Set-Point Adjustment: In order to adjust the RPM Set Point in OFF Mode, first move the RPM/SPEED mode selection switch to the RPM position. Using the +/- switch, select the desired Set Point. The RPM icon will illuminate and the LCD will display the current Set Point. Briefly pressing the +/- switch will increase or decrease the Set Point by 20 RPM. Holding the switch will increase or decrease by 100 RPM. The RPM Set Point is limited to a minimum of 1200 RPM and a maximum of 5000 RPM.

Speed Set Point Adjustment: In order to adjust the Speed Set Point in OFF Mode, first move the RPM/SPEED Mode selection switch to the SPEED position. Use the +/- switch to select the desired Set Point. The SPEED icon will illuminate and the LCD will display the current Set Point. Brief presses of the +/- switch will increase or decrease the Set Point by 0.2 mph. Holding the switch increases or decreases the Set Point by 1.0 mph. The Speed Set Point is limited to a minimum of 5.0 mph and a maximum of 50 mph.

Turning On RPM Cruise Control Mode: To turn on the Cruise Control System in RPM Control mode, make sure that the RPM/SPEED mode selection switch is in the RPM position and that the current engine speed is at least 400 RPM less than the Set Point. Press and hold the ON/OFF switch in the ON position for approximately one second. The LCD should now display the current engine speed, the RPM icon should be illuminated and the LOCK icon should be blinking.

Turning On Speed Cruise Control Mode: To turn on the Cruise Control in Speed Control mode, make sure that the RPM/SPEED mode selection switch is in the MANUAL (center) position and that current engine speed is at least 1200 RPM. Then press and hold the ON/OFF switch in the ON position for approximately one second. The LCD should display the current engine speed and the LOCK icon should be blinking.

Manual Set Point Adjustment: The Manual Set Point can be adjusted using the +/- switch. The LOCK icon will disappear and the LCD will display the current Set Point. Short presses of the +/- switch will increase or decrease the Set Point by 20 RPM. Holding the switch increases or decreases the Set Point by 100 RPM. The Manual Set Point is limited to a minimum of 1200 RPM and a maximum of 5000 RPM.

Using Speed Control Mode: Manual Control works basically in the same way that RPM Control Mode does. The difference is that when the system is turned ON in manual mode the Set Point is set to the current engine speed. For example, if the Cruise Control is OFF and the engine speed is 2500 RPM, and the system is turned on, the engine will hold the engine speed at 2500 RPM.

Disengaging the Cruise Control System: There are two ways to disengage the system. Pulling back the throttle will disengage the system at any time. The system remains ON and can be engaged by accelerating the boat until the LOCK icon stays illuminated, or by moving the ON/OFF switch to OFF. It is recommended that the throttle be pulled back before turning off the system.



Using Care While Fueling



The ignition timing as set by the factory requires the use of unleaded fuel with an Anti-Knock Index Number (AKI)/Pump Octane Number range between 89 octane and 93 octane. Nearly any medium-grade gasoline available for automotive use may be used.

Fuel Systems

The ProStar, MariStar and X-Series models are equipped with a new, highly innovative fuel system. This system is designed to provide you with years of trouble-free service. Some of the latest innovations related to fuel handling safety are also incorporated into the fuel delivery system.

The system uses a fuel pump mounted in a capsule that is installed directly in a fuel tank. A similar system has been used in automotive vehicles for over a decade and has provided years of proven service. The pump

system in your boat was specifically designed for the marine environment and contains a number of added safety components that are unique to the marine system. Because of the special nature of the design, there are no user-serviceable parts. Any parts in need of service or maintenance will need to be addressed by your MasterCraft dealer. The technical team there is equipped with the special tools needed to disassemble and service the fuel capsule and associated parts.

The fuel line that travels in the boat's bilge area from the tank to the engine is a special multi-layer armored line that is covered with a special material known as a fire sleeve. The fire sleeve affords protection to the fuel line in the unlikely event of a boat fire.

The sleeve is colored orange in order to afford easy identification to the fuel line. MasterCraft recommends daily inspection of the bilge for foreign materials and the possibility of gas or oil leakage detection. As part of your daily inspection, include a visual check of the orange fire-sleeved fuel line. If you see damage to the sleeve or line or in any way suspect damage or fuel leakage, DO NOT START YOUR BOAT! Immediately call your MasterCraft servicing dealer and let him or her assess the situation.

Alternatives and Additives

We do not recommend that you use alcohol-modified fuels in your MasterCraft boat because of the following side effects:

- **Moisture:** Alcohol-blended fuels absorb and keep moisture. Moisture inside the fuel tank causes many engine problems.
- **Performance:** Alcohol-blended fuels cause the engine to operate on a leaner fuel/air ratio and may cause hard starting, stalling and vapor lock. Engine damage may result.
- **Deterioration:** Alcohol quickly deteriorates rubber and plastic components in the fuel system, causing more frequent inspection and replacement of parts. This increases the potential for fire and explosion due to fuel leakage. The new fuel system, however, is designed to withstand alcohol and MTBE fuel additives commonly found in the new "oxygenated" fuels. We still recommend fuels with as little alcohol as possible due to the moisture absorption problem identified above.

NOTE: Fuel additives and treatments, other than conditioners for moisture absorption and winter storage, are not recommended for use in MasterCraft Power engines.

Using Oxygenated Fuels or Fuels with Alcohol

MBTE (*methyl butyl tertiary ether*) is any oxygenate and octane enhancer. This compound is blended with fuel in some parts of the country. Fuel that is no more than 15% MBTE is acceptable for use in your engine. Ethyl alcohol or grain alcohol is acceptable for use as long as it is a blend and the blended fuel contains no more than 10% ethanol.

Type of Gasoline To Use

Gasoline should meet the specifications ASTM D4814 in the United States and CGSB 3.5-92 in Canada.

If you operate your engine in a country other than the United States or Canada, unleaded fuels may be difficult to locate. Using leaded fuels in your engine is not recommended as engine components will last longer using unleaded fuel. *(Leaded fuel is not compatible with today's engines.)*

When a Boat Does Not Run For a While

The engine manufacturer recommends the use of a stabilizer such as Sta-Bil fuel stabilizer for boat users who consume less than a tank of fuel every two weeks. Today's fuels are more susceptible to degradation and the use of a quality stabilizer will help ensure fewer problems for the occasional boater.

If your boat has not been used for more than 30 days during which fuel remained in the tank (even stabilized fuel), the engine may run poorly until the "old" fuel is used up. Engine parts and fuel injection components rendered inoperable or damaged from old and/or poor-quality fuel will not be covered under warranty!

Always tighten the fuel plate cap completely with the cap key after refueling.

CAUTION

Fuels that are blended to contain methanol or wood alcohol are not to be used in MasterCraft engines. These fuels can corrode some metal parts in your fuel system and engine. Damage caused by the use of unapproved fuels is not covered by warranty.

CAUTION

Extended storage with fuel in the system can affect the fuel's stability and may require system inspection and fuel filter replacement when the unit is placed back into service.

CAUTION

Damage to the engine by use of low-quality gasoline or gasoline with an octane rating below the minimum level listed will void the warranty on your boat.

DANGER

Gasoline is extremely flammable and highly explosive under certain conditions. Always stop the engine and never smoke or allow open flames or sparks within 50 feet of the fueling area when fueling.

DANGER

Take care not to spill gasoline. If gasoline is spilled accidentally, wipe up all traces of it with dry rags immediately and dispose of properly on shore.

CAUTION

Allowing the fuel level in the fuel tank to fall below one-quarter of a tank full may affect the reliability of the fuel pump or result in damage to the fuel pump, which is not covered under warranty.

Safety Checks & Services

The following checks and services are essential to safe boating and must be performed. Get in the habit of performing these checks in the same order each outing so that it becomes routine.



DO NOT launch or operate the boat if any problem is found during the Safety Check. A problem could lead to an accident during the outing, resulting in serious injury or death. Any and all problems should receive attention immediately. See your MasterCraft dealer for assistance.

Before Each Operation

- ✓ These tasks are best accomplished before the boat is launched.
- ✓ Check the weather report, wind and water conditions.
- ✓ Check for recommended on-board tools and parts.
- ✓ Check that all drain plugs are installed properly, including bilge and rear drain.
- ✓ Check the propeller and shaft for damage.
- ✓ Check the cooling water intake pick-up and transmission cooler for blockage.
(Additional details on this will follow in the Scheduled Maintenance Checks and Service section.)
- ✓ Check the raw water impeller if the boat showed signs of over-heating during the last usage.
- ✓ Check the engine oil level.
- ✓ Check that there is an adequate supply of fuel.
- ✓ Check that the steering system operated properly.
- ✓ Check that required safety equipment is on-board.
- ✓ Check that the mandatory personal flotation device for each passenger is on-board.
- ✓ Check that the fire extinguisher is fully charged.
- ✓ Check that no fuel, oil or water is leaking or has leaked into the bilge compartment.
- ✓ Check all hoses and connections for leakage or damage.
- ✓ Check that the alternator belt is in good condition.
- ✓ Check the engine drain plugs.
- ✓ Check that all required **Scheduled Maintenance Checks and Services** (see following sections) were performed.

During Operation

- ✓ Check gauges frequently for operating conditions.
- ✓ Check that controls operate smoothly.
- ✓ Check for excessive vibration.

After Operation

- ✓ Check for fluid leaks.
- ✓ Check the fins, propeller, rudder and shaft for damage after removing the boat from the water.
- ✓ In boats equipped with a ballast system, drain water from the ballast before towing.



New Boat Break-In

The first 50 hours of operation are the most important to your boat. Proper break-in will ensure maximum performance and the longest possible power-train life. The break-in period allows moving parts within the engine and transmission to wear-in properly. All MasterCraft boats are lake-tested on the water before leaving the factory, but the break-in must continue for the first 50 hours of your ownership.

NOTE: Failure to follow the break-in procedure exactly as stated will void the engine warranty!

NOTE: Before operating the boat for the first time you must read the manual completely!

CAUTION

To ensure proper break-in and lubrication, boat owners should not remove the factory break-in oil until after the initial ten (10) hours of operation. At that time, an oil change should be performed by an authorized MasterCraft service technician at your local MasterCraft dealer.

Please follow the break-in procedure carefully. Close attention to the following is very important:

- **Maintain the proper oil level.** Until the piston rings, cylinder and other working internal parts are thoroughly seated, oil consumption can be high and must be carefully watched. The oil requirement is for SAW 15W40, API SJ/CH4. If the specified oil is not available, 20W40 oil may be substituted but only if it meets the API SJ/CH4 standards.
- **Pay close attention to the gauges.** It is important to stop the engine immediately if the gauges indicate a problem. Low oil pressure and overheating are serious issues and require immediate attention.
- **Abnormal vibration or noises.** These symptoms can precede trouble and should not be ignored. Occasionally, hardware may work loose, mountings may need tightening or the driveline may require attention.
- **Fuel, oil or water leaks.** Leaks can pose a serious safety threat. If one occurs, it is most likely to do so after a few hours of operation.
- **Vary the engine speed.** Never run the engine for more than three (3) minutes at any constant RPM during the break-in period. Doing this will assist in the proper break-in of rings and bearings.
- **Plane the boat quickly.** Operating the boat at low speeds places an excessive load on the engine. Plane quickly, then back down to a slower speed.

First Hour of Operation

Start the engine and allow the warm-up to normal operating temperature (140 degrees F to 190 degrees F) at low idle (600 to 800 RPM).

Operate the boat in forward gear, accelerate quickly, but gradually, to planing speed. Then return the throttle back to maintain a planing attitude. Vary the engine speed, but do not exceed 2000 RPM for the first hour. Carry only a light load.

First Five Hours of Operation

Continue operation at plane and vary the engine speed, but do not exceed 4000 RPM. Occasionally reduce the throttle to idle speed for a cool-down period. Carry only a light load.





First Ten Hours of Operation

Operations during the initial ten hours of break-in is very much the same during the second five hours as the first five, except that it is permissible to run at full speed for 2-3 minutes at a time. Do not accelerate suddenly from low-to-full speed. Increase speed gradually during this period. Again, an occasional cool-down period is recommended.

After the First 10 Hours of Operation

Return the boat to your MasterCraft dealer for the 10-hour inspection. At this time, your service technician should change the engine oil and filter, as well as making other necessary checks, adjustments and services. **The oil change is particularly critical to long life and good service from your engine!**

After Break-In

Once the break-in period is over, the boat may be operated continuously at any speed, but not beyond the maximum. For the RPT-1 engine that is 4800 RPMs; the MCX is 5200 RPMs, the LQ9 Cadillac is 5400 RPMs, and the 8.1 Liter engine is 5400 RPMs as well. *(Please refer to the Crusader operation manual for information and details on proper break-in procedure for those engines.)*

MasterCraft boat engines are equipped with rev-limiters which will cause a fluttering sound when reached. If the boat has the correct propeller set-up, operators should never reach the limiter, but if that happens it is a signal that you should reduce the throttle and check with your dealer to determine the cause.

Always remember that during normal operation you should allow the engine to warm up gradually. Be sure the engine is warm before accelerating. Pay careful attention to the gauges and the Check Engine indicator. Also, check the oil level frequently during the first 50 hours of operation since the piston rings and cylinders will require that period to seat properly.

After the initial 50 hours of operation, the engine oil and filter must be changed. **This second oil change is very important to ensure a long and trouble-free engine life.**

(Note that the engine manufacturer does not recommend using synthetic oils until at least 100 hours.) After break-in all maintenance is performed at regular intervals.

See the *Scheduled Maintenance Checks and Services* section for more details.

CAUTION

Failure to follow the engine oil recommendations listed in the manual can cause additional engine wear and increase the possibility of engine component failure. Damage to your engine due to incorrect oil usage can be costly to repair, and is not covered by your warranty!

Starting & Basic Operation

NOTE: If you are operating this boat for the first time, you must follow the *New Boat Break-In* procedures as described in the previous section. Failure to follow these procedures could result in serious engine damage and would void your warranty!

Before Starting

Familiarize yourself with the controls and indicators used on your MasterCraft boat. Perform all Safety Checks and Services as described earlier. Perform all Scheduled Maintenance Checks and Services also.

Step 1: Lift the engine cover and inspect the bilge and engine compartment for any fluid leakage. We recommend lifting the engine compartment cover for inspection before each use.

Step 2: Operate the bilge blower for at least four (4) minutes. Leave the bilge blower ON through the starting process and until the boat has planed. Check the hull drain plugs. Make sure they are installed and secure.

 **DANGER**

To prevent a possible explosion, operate the blower for at least four (4) minutes before starting the engine and always when at idle or slow-running speed. Explosive gasoline and/or battery fumes may be present in the engine compartment. Failure to do so may result in serious injury or death!

 **DANGER**

Before starting the engine, open the engine compartment and check for gasoline fumes, fuel and oil leaks or the presence of fuel or oil in the bilge.



NOTE: Always start the engine with the control lever in the neutral position or with the shift disengaged. Your boat is equipped with a neutral-start safety switch that will not allow the engine to be started in gear. On EFI engines, if the engine floods, it can be cleared by pushing the button that is in the throttle arm and advancing the throttle to full open—100 percent of its travel—and turning the key switch to the start position. The ECM shuts off the fuel supply to the injectors so that no fuel will be delivered during the cranking cycle. When the engine starts, immediately return the throttle to the idle position so that the engine will not over-rev.



Starting the Engine

Step 1: Attach the emergency engine safety switch tether (lanyard) between an article of your clothing and the switch.

Step 2: For normal starting, leave the throttle lever in neutral. The electronic controls will meter the correct fuel and air automatically.

Step 3: Turn the key switch to the start position and hold until the engine starts. Release the key as soon as the engine starts. If the engine does not start within 10-15 seconds:

- Pull out the neutral detent.
- Advance the throttle lever to wide-open throttle and crank the engine. When the engine fires, quickly return the throttle to the idle position.

CAUTION

Do not operate the starter motor continuously for more than fifteen (15) seconds without at least two (2) minutes for a “cool-down” period. Failure to do so may cause the starter to overheat, resulting in damage. Failure to release the ignition key after the engine has started may cause damage to the starter motor and drive.

Note: While the engine is warming up, check to see that all lights and gauges operate properly, as well as the steering. There should be no apparent leaks under pressure. Re-engage the control lever after warm-up by returning the lever to neutral and pushing the throttle button back into the engage position.

Step 4: Always allow the engine to warm up to normal operation temperature before accelerating. EFI engines, including all late-model MasterCraft engines, are programmed with a phased warm-up to ensure that the engine is warm before full RPM is possible.

103 F (40 C) or less: 3,000 RPMs

104 to 139 F (41 to 59 C) at least 10 seconds after starting: 4,200 RPM

140 (60 C) and higher, at least 10 seconds after starting: Full RPM

Shifting Gears

When shifting, always move the control lever smoothly and quickly into gear. Do not hesitate. Slow gear engagement could damage the shifting mechanism in the transmission. Always allow the engine speed to fall to low idle (600-800 RPM) before making a gear shift.

Forward: Raise the lifter ball under the lever knob and then push the control lever forward into the first 45 degrees of travel. Throttle movement will begin after 45 degrees.

Reverse: Raise the lifter ball under the lever knob and briskly pull the control lever back into the 45 degrees of travel. Throttle movement will begin after 45 degrees.

Once the shift has been completed, continue to move the control lever slowly in the desired direction to increase speed.

NOTE: When shifting from forward to reverse or reverse to forward, be sure to stop the control lever in the neutral position and allow the engine to fall between 600-800 RPM before completing the shift.

Underway

If the oil pressure gauge indicates low or no oil pressure, stop and check the oil level. If the temperature gauge indicates overheating, stop and check the raw water impeller for blockage. DO NOT operate the boat until the cause for the warning has been found and corrected.



CAUTION

Continued operation after the warning light has illuminated may cause severe engine damage. This will void your warranty.

Stopping

- Step 1: Slowly bring the control lever to the neutral position. If the boat has been driven for a long period of time or at high speed, allow the engine a 2-3 minute cool-down period at low idle (600-800 RPM).
- Step 2: Turn the ignition key to the OFF position to stop the engine.
- Step 3: If any problems were encountered during operation, have the boat inspected by your MasterCraft dealer. Request any necessary repairs before operating again.

Operational Hints

MasterCraft urges you—and all others who will be operating the boat—to seek certified instruction from the local boating authorities. This section is designed to present the most basic operational principles. It is NOT intended to cover all conditions encountered during operation. Therefore, the principles presented in this manual are limited to the facts related directly to the operation of the boat, while the responsibility for the proper application of these principles belongs with you.



Adding additional ballast to your MasterCraft boat is not recommended, and can result in impaired visibility, diminished handling characteristics and instability when operating your boat, and may result in potential structural and/or engine damage to your boat, which damage will not be covered by your warranty.



Loading

Never overload your boat. The maximum weight capacity as listed on the certification plate includes all items added to the boat (persons and gear). Also, proper distribution of weight is critical to boat performance. Allocate the load as evenly as possible.

These capacities include filled ballast bags, whether they are factory-installed, dealer-installed or added by the customer.

Note that adding ballast bags reduces the number of people and the amount of gear that can be added. Failure to adhere to the total maximum capacity may result in too much strain on the drive train or can sink the boat. This is not covered under warranty!

Emergencies

Know how to use and spot distress signals—and offer assistance if possible. Remember, you may need assistance some day.

Courtesy

Always respect the rights of others on the water. Keep wide when passing, slow down in crowded areas, be alert and be aware of your wake and wash.

First Time Operation

When taking to the water for the first time, you must keep in mind a few general guidelines:

- **Practice makes perfect!** Start in calm water with no wind or current and plenty of room until you get the feel for the boat and its controls.
- **Proceed slowly!** Give yourself time to think, react and maneuver.
- **Recognize outside forces!** Check the wind direction and velocity, as well as water currents and waves.
- **Have a crew on hand!** Have friends or family ready with fenders, lines and a boat hook to assist you when docking, as well as launching and loading.
- **Remember that a boat is not an automobile!** Boats cannot be maneuvered and stopped like a car. Boats steer from the stern (rear) and have no brakes.

Basic Maneuvering

Steering response is dependent upon three factors: rudder position, motion and throttle. While high speed maneuvering is relatively easy and takes little practice, slow speed maneuvering is far more difficult and requires much time and practice to master.

With both steering and propulsion at the rear of the boat, the initiation of a turn pushes the stern of the boat away from the direction of the turn. The stern follows a larger turning circle than the bow. This is especially important to remember when making close quarters maneuvers.

While the effects of unequal propeller thrust (torque steering), wind, and current may not always be present, a practiced driver will use them to his advantage.

Unequal thrust is a phenomenon shared by all single-engine, propeller-driven boats. A counterclockwise rotation propeller tends to cause the boat to drive to port when going forward, and to starboard when going backward, with the rudder in the straight-ahead position.

At high speed, there is compensation for this effect, and it is virtually non-existent. But, at slow speed—and especially during backing—the effect can be very pronounced. This is the main reason most experienced drivers approach with the dock to the starboard of the boat.

Stopping—or checking headway—is a technique that must be mastered. With no brakes, reverse must be used to stop the boat. The momentum of the boat will vary according to the load. Make it a practice to slow to no-wake speed before shifting into reverse.

When practicing maneuvering techniques, always do so in open water that is free of traffic. Adequate practice may make the difference between a pleasurable experience or a damaging—at the least, embarrassing—one.

High Speed Operation

Your MasterCraft boat was designed to be a high-performance ski boat. You may have seen professional drivers with advanced operating skills perform high-speed maneuvers and on-a-dime turns. DO NOT attempt to duplicate or simulate these feats. Paid, professional drivers log thousands of hours on the water and carefully choreograph every move. Plans are made in advance in the event the routine must be aborted. Maneuvers of this nature could cause serious injury or death, as well as damage to your MasterCraft that will not be covered under warranty.

For the best engine performance and longevity, the wide-open-throttle (WOT) engine operation must be near the top of, but within, the specified WOT operating range. To adjust the WOT operating range, you must select a propeller with the proper diameter and pitch. The propeller supplied with your boat was chosen for best all-around performance under average operating conditions.

Load, weather, altitude and boat condition all affect WOT engine operation. If you use your boat for several different applications such as wakeboarding, barefooting and cruising, it may be necessary to have two or more propellers of different size and pitch to allow the engine to operate in the WOT range for each application.



Propping the boat should be done after the engine break-in and the initial 10-hour dealer check. The boat should be loaded the way it would normally be for each application. For example, if you are propping the boat for wakeboarding, fill the ballast tanks and add the people and gear you would normally expect to carry in the boat. Take the boat out and after warm-up run it at wide-open-throttle and note the maximum RPM. EFI engines are equipped with RPM limiters to prevent over-revving. Take note if the RPM limiter is activated.

If the WOT RPM is higher than the maximum RPM in your engine's WOT operating range, the boat is under-propped. The engine operating ranges for engines in MasterCraft boats are:

**RPT-1 engine:
4600-5000 RPM**

**MCX engine:
4800-5200 RPM**

**LY6 engine:
5200-5600 RPM**

**8.1 Liter engine:
5000-5400 RPM**

**Crusader engine:
See Crusader manual for information.**

Installing a higher-pitched propeller will reduce the WOT RPMs. *An engine that is over-revving may quickly experience catastrophic damage.*

If the WOT RPM is lower than the minimum RPM in your engine's WOT operating range, the boat is over-propped. Installing a lower-pitched propeller will increase WOT RPMs.

An engine that is under-revving is "lugging." This places a tremendous load on the pistons, crankshaft and bearings and can cause detonation, piston seizure and other engine damage.

Elevation and weather also have a very noticeable effect on the wide-open-throttle power of an engine. Since oxygen gets thinner as elevation increases, the engine begins to starve for air. Humidity, barometric pressure and temperature have a noticeable effect on the density of air since heat and humidity thin the air.

This phenomenon can become particularly apparent when an engine is propped out on a cool, dry day in spring and later, on a hot, humid day in summer, and does not have the same performance. Although some performance can be regained by dropping to a lower-pitch propeller, the basic condition still exists. The propeller is too large in diameter for the reduced power output. An experienced marine dealer can determine how much diameter to remove from a lower-pitch propeller for specific high-elevation locations.

MasterCraft's engine manufacturers suggest that consumers consult with the dealer from whom you purchased your boat regarding the best propeller for the application in which you expect to run your boat. **However, you should be aware that changing your propeller may void your warranty.** Again, working with your dealer is your best bet to ensure excellent performance.

Unusual Operating Conditions

If the body of water is unknown, talk to the local boaters about the type of obstacles you may encounter beneath the water's surface. Rocks, tree stumps and sandbars are all dangerous and damaging. Be especially wary of rivers and man-made lakes. Rapidly changing conditions can cause daily changes in underwater hazards.

Stay well clear of floating debris. What looks to be a small branch in the water may well turn out to be an entire tree.

When traveling through weedy areas, keep an eye on the engine temperature gauge. Weeds caught up and blocking the water flow through the raw water intake or transmission cooler will cause trouble. Also, after leaving the weedy area, shift to neutral for a few seconds and then to reverse for a few seconds to unwind any weeds that may have wrapped around the propeller.

Docking and Tie-Up

Approach the docks slowly, with the starboard side of the boat if possible. The natural tendency to torque steer with the rotation of the propeller at slow speeds makes docking easier on that side. Also, use wind and current to your advantage when docking.

Before tying up the boat, be sure to use enough dock bumpers to protect the boat from damage. If possible, tie-up with the bow toward the waves. Use good quality double-braided nylon line. Tie-up only to the lifting or tie-down eyes. Never use the handrails or ski pylon.

If the boat is to be moored for a long period of time, use chafing protectors to protect the gel coat finish. Leave a little slack in the lines, allowing for some wave movement or tidal action where applicable.

If the boat is to be kept in or near water for the season, consider the purchase of a boat lift. These lifts prevent the build-up of marine growth on the hull as well as protecting it from damage typical of on-water storage, such as blistering. Make sure the boat lift supports to the hull correctly. See the next section, *Lifting the Boat*.



Lifting the Boat

When the boat is hoisted from the water, use the lifting eyes or a sling for easy, damage-free lifting.

CAUTION

DO NOT use the ski pylon for lifting. It is **NOT** designed as a central lifting point. Also, **DO NOT** use the stern ski tow as a lifting ring. The deck will be damaged. See the Storage Cradle sub-section of the Lifting the Boat section of this Manual. Also never lift a boat with a large amount of water in the bilge or containing a water-filled device such as a Fat Sac or ballast system. The extra stress will put an excessive load on the hull and lifting equipment that may seriously damage the boat and void your warranty.

Using Lifting Eyes

An overhead hoist with two-ton capacity (minimum) should be used to lift your boat. Cables should be rated for at least 3500 pounds each. When lifting, keep the bow slightly higher than the stern to prevent any possibility of water running into the engine exhaust manifold.

Using Lifting Slings

An overhead hoist with a two-ton capacity (minimum) should be used. Slings must be 6 inches wide by 20 feet long and a minimum of 3500 pounds capacity each. Use an eight-foot spreader bar on each sling to prevent damaging side pressure to the deck or gunwale molding.

CAUTION

Lifting slings must never contact shafts, struts or hardware protruding from the hull. Damage caused by slings will void your warranty.

CAUTION

When your boat is out of the water, it is important to support the hull correctly to avoid any hull damage that will void your warranty.

Storage Cradle

If a storage cradle is used, the hull must be properly supported to prevent load damage. *This can occur with as little as 15 pounds per square inch of pressure.* **DO NOT** support the boat by resting the hull on the keel. Vertical supports must extend from the chine to the keel with no gaps between the hull and cradle supports. A total support area of at least 250 square inches is required for proper support. Protect all items extending from the hull to avoid resting on the cradle or the ground. **DO NOT** apply any load stress to the prop, shaft, rudder, swim platform, water intake grate or other protruding items.



Corrosion

NOTE: Damage due to corrosion is not covered under warranty!

Galvanic Corrosion

Galvanic corrosion (electrolysis) to the boat is the decomposition of metal due to the effects of electrolytic action. When two dissimilar metals are immersed in a conductive fluid (salt water), an electric current is produced, much like the action of a battery. As the current flows, it takes with it tiny bits of the softer metal. If left unchecked, a great deal of damage could occur.

If you operate in salt, polluted or brackish waters, your boat should be equipped with a transom-mounted zinc anode to prevent damage to those metal parts coming in contact with the water. The zinc is, by design, self-sacrificing. It is slowly eroded away by electrolytic action and requires periodic inspection for deterioration.

If the zinc shows extreme erosion, it must be replaced to continue protection, or damage to other metal parts may result.



Salt Water Corrosion

Your boat has been designed for operation in fresh water unless it has specifically been designed as part of the Saltwater Series. If you are operating a fresh-water model temporarily in salt, polluted or brackish water, you will need to flush with fresh water. The entire engine cooling system should be flushed with fresh water for at least ten minutes after each use in such waters.

Boats operated continuously in salt water should be equipped with the closed cooling system to preserve engine life.

Marine Growth

If accelerated marine growth is a problem in your area, an anti-fouling bottom paint may be necessary to slow growth while protecting your gel coat.

Before selecting a bottom paint, talk with other boaters and your MasterCraft dealer to determine the product that works best in your area. Many local variables can affect the selection of paint. Be sure to follow the paint manufacturer's directions exactly.



Be sure that all fasteners you use are approved and rated for marine use. Most fasteners used on MasterCraft boats are stainless steel or specially coated to resist corrosion.



Use of improper parts can cause component or engine failure, which may result in serious injury or death!

Cleaning the Boat

Periodic cleaning is the best way to keep your boat looking like new. Regular washing and waxing keep dirt and scum from building up and deteriorating the finish. Keeping your boat in a showroom-new condition results in personal satisfaction and higher resale value, as well.

Your boat is made of fiberglass-reinforced plastic resin material that is easy to clean and care for. Several layers of resin material are chemically bonded together to form the hull. The smooth outside surface of the hull is a layer of gel coat resin. While the gel coat is solid color, the thickness of the layer is only a few millimeters thick—like paint on a car but much tougher, and chemically bonded.

Beneath the gel coat surface is a series of layers of chemical resin, fiberglass mat and woven roving. It is these layers that give the boat its strength and keep the hull shape. The boat bottom also uses special core-mat material for its strength-to-weight and superior marine performance.

Hull

When washing the boat, be sure to use a mild detergent and warm water solution. **DO NOT** use abrasive cleaners, solvents, ammonia or chlorine as these will damage the gel coat surface. Under extreme conditions, special cleaners may be used to remove marine growth from the hull. See your MasterCraft dealer for further instructions.

Waxing the entire gel coat surface at least twice a season is recommended for all climates. Use of a specially formulated marine gel coat wax, such as MasterCraft Premium Marine Wax, will reduce color fade, soil and scum adhesion. If the gel coat has chalked or faded from lack of proper maintenance, buffing may be necessary to bring back the shiny appearance. Hand buffing with a #7 rubbing compound or power buffing with glazing compound #1 will quickly restore the surface.

Upholstery

Regular washing with mild detergent and warm water or vinyl cleaners is sufficient to keep the cushion and vinyl coverings in good condition. Keep the cushion from becoming soaked, and dry thoroughly after washing to prevent mildew accumulations when the boat is covered. Prop up the cushions in the boat when it is covered to take advantage of air circulation. Spray with a mildew repellent.

While your vinyl is made to withstand the elements, it is important to care for it by keeping it clean at all times. Many substances may stain your vinyl if left untouched over a period of time. Remember to remove any contaminant and clean vinyl immediately.

Our vinyls are made to withstand the effects of sun, heat, acid rain and soiling, under normal conditions. Please consult the following cleaning recommendations before cleaning your upholstery.

Certain household cleaners, powdered abrasives, steel wool, and industrial cleaners can cause damage and discoloration. These are not recommended for use. Dry cleaning fluids and lacquer solvents should not be used as

they will remove the printed pattern and gloss. Waxes are not recommended because many contain dyes and solvents that can permanently damage the protective coating.

In some instances, consumers have reported the appearance of a pink stain on vinyl that is resistant to various cleaning methods. Our lab tests indicate that the pink stain has been present in the past, but it becomes more visible to the naked eye whenever the whitest-white vinyls are used. **This is true regardless of manufacturer or vendor.** MasterCraft has chosen a white that reduces the appearance of the pink stain but retains as much of the lightest white we can use.

Although there can be other causes for pink staining in vinyls, most pink stains are caused by dyes produced by micro-organisms. These



dyes are metabolic products of the micro-organisms, otherwise known as a form of fungi.

It is virtually impossible for consumers to avoid these micro-organisms as they exist in the atmosphere. It is also more prevalent in high-humidity areas. Rain can cleanse the air with the result that the micro-organisms are deposited on items such as marine vinyl.

While the vinyl is treated to resist the growth of micro-organisms (*meaning the vinyl is not a food source*), the stain results from failure to properly clean and maintain the vinyl. This means that after use, the upholstery must be cleaned with a soft brush and warm soapy water, followed by a thorough rinse with clean water. If this procedure is not followed, the micro-organisms can find the marine vinyl to be a suitable host site. This situation is worsened if the boat is stored without proper ventilation or if the boat cover is put on while the vinyl is still wet, creating a situation in which all forms of fungi (mold and mildew) thrive.

The organism causing the pink stain has been identified by the Burlington Scientific Corporation as *Streptovorticillium reticulum*, although there are other strains of organisms that can cause stains.

Failure to follow these instructions in the proper care of upholstery can cause your warranty to be voided!

The cleaning table presented in this section is offered only as a suggestion and as an aid in attempting to deal with stains. We cannot guarantee that the cleaning methods will work. **Stains from any external source are unlikely to be covered by warranty.**

Carpet

Occasionally washing with mild detergent and warm water or household carpet cleaners will help keep the carpet clean. Thoroughly hose the detergent out of the carpet and into the bilge. (*This is usually the best time to clean the bilge also.*) Allow the boat to remain uncovered in the sun for several days to prevent any mildew or odor caused by moisture.

Teak Wood

Regular cleaning and oiling of teak wood will maintain its original appearance. Use a teak cleaner that can penetrate the pores of the wood and cleanse them of dirt and stains. Avoid caustic teak cleaners since they can damage the wood. Immediately after cleaning, an oil sealer should be applied with a soft cloth. Allow a couple of hours for the oil to soak into the wood and apply a second coat. Wipe off excess oil to prevent a varnish look.

Windshield

Cleaning the windshield when needed is an important safety precaution. Your MasterCraft windshield is made of tempered safety glass and requires special cleaning to prevent scratches to the surface. Use a mild soap solution and damp cloth only. Harsh detergents, solvents, chemicals or dry cloths could damage the windshield. Also, when your boat is in service, avoid using the windshield as an aid for balance or getting out of a seat. This causes undo stress on the window frame and could damage it.

Stainless Steel and Chrome

Stainless steel and chrome-plated parts are not totally resistant to corrosion. Occasional cleaning and polishing with a marine chrome-and-stainless polish will maintain and extend the useful life. In salt water areas, rinse all hardware with fresh water and apply a light coating of protective oil to enhance the appearance after each use.

Acceptable Upholstery Cleaners

MasterCraft Premium Shine & Protectant

Vinyl Finish Vinyl Cleaner

Dish Soap, such as Dawn or Ivory

Fantastik

303 Protectant

Unacceptable Upholstery Cleaners

409 (it states not for use on vinyl!)

Murphy's Soap

Simple Green

DC Plus

Armorall

Top Kote Sealant

Son of a Gun

Orange 88 Degreaser

Roll Off

Bleach / Baking Soda

Turtle Wax / Tar Remover

APCO

Tannery

Harbor Master

Any product not listed above in the Acceptable Upholstery Cleaners!

Sun Top and Boat Cover

Occasional cleaning of the top and cover should be done with mild soap and warm water. Thoroughly wet the entire surface and use a soft-bristled brush. Rinse completely and allow to drip dry. Then allow it to lay in the sun until completely dry. After cleaning, treat with a water repellent as necessary.

For heavy soil, a mild solution of 1/3-cup bleach, 1/4-cup household soap and one gallon of water may be used for soaking. **DO NOT** allow to soak for more than 20 minutes. Longer can cause deterioration of the stitching. Rinse completely and allow to drip dry. Then follow up with time in the sun until it is completely dry.

We strongly recommend the use of MasterCraft's GMP Products, which are specially formulated for use in your boat!

<i>Common Stains</i>	<i>Steps</i>	<i>1</i>	<i>2</i>	<i>3</i>
<i>Betadine</i>		<i>B</i>	<i>A</i>	
<i>Chewing Gum</i>		<i>D</i>	<i>A</i>	
<i>Eyeshadow</i>		<i>E</i>	<i>B</i>	
<i>Motor Oil</i>		<i>B</i>		
<i>Spray Paint</i>		<i>B</i>		
<i>Mildew or Wet Leaves*</i>		<i>C</i>	<i>B</i>	<i>A</i>
<i>Shoe Polish*</i>		<i>D</i>	<i>B</i>	
<i>Yellow Mustard</i>		<i>A</i>	<i>B</i>	<i>C</i>
<i>Oil-Base Paint</i>		<i>D</i>	<i>B</i>	
<i>Suntan Lotion*</i>		<i>A</i>	<i>B</i>	
<i>Tar/ Asphalt</i>		<i>D</i>	<i>B</i>	
<i>Lipstick</i>		<i>A</i>	<i>B</i>	
<i>Latex Paint</i>		<i>A</i>	<i>B</i>	
<i>Crayon</i>		<i>D</i>	<i>B</i>	
<i>Ketchup</i>		<i>A</i>	<i>B</i>	
<i>Grease</i>		<i>D</i>	<i>B</i>	
<i>Ballpoint Ink*</i>		<i>E</i>	<i>B</i>	<i>A</i>
<i>Household Soil</i>		<i>A</i>	<i>B</i>	
<i>Permanent Marker*</i>		<i>E</i>	<i>B</i>	<i>C</i>
<i>Coffee, Tea, Chocolate</i>		<i>B</i>		

DO NOT USE 409 CLEANER OR SILICONE-BASED PRODUCTS!!!!

A = Medium-soft brush; warm soapy water / rinse / dry.

B = Vinyl finish cleaner.

C = One (1) tablespoon ammonia, one-fourth (1/4) cup of hydrogen peroxide, three-fourths (3/4) cup of water / rinse / dry.

D = Wipe or scrape off excess (chill gum with ice).

E = Denatured alcohol / rinse / dry.

**Sun tan lotion, shoe polish, wet leaves and some other products contain dyes that stain permanently.*

Scheduled Maintenance Checks and Service



Frequency and Scheduled Maintenance

Proper care, maintenance and adjustment will contribute to the peak performance of the boat, while also extending the overall service life and the resale value.

Most MasterCraft boats built over the past decade are equipped with Indmar engines, and the information that follows was developed with their assistance. The instructions are grouped by the required service intervals. The pages that follow also provide instructions on how to accomplish the required checks, inspections and services listed. Your MasterCraft dealer or service center is the best source for proper maintenance.

The following definitions apply to maintenance:

Check—Verify the operational readiness by physical measurement, i.e., measuring the oil level with the dipstick gauge, or alignment with a feeler gauge.

Inspect—Determine the operational readiness by examination, i.e., by sight, sound or feel.

Change—Tasks required periodically to keep the boat in proper operating condition, i.e., drain, replenish or service.

New Boat Break-In

Note: MasterCraft recommends these functions be performed by factory-trained MasterCraft technicians.

- Change the engine oil and filter after the initial 10 and 50 hour mark of operation. Use only manufacturers' recommended lubricants. (See *Quarterly and Annual Maintenance* also.)
- Lubricate the engine starter drive gear and shaft. (See *Quarterly Maintenance* also.)
- Check the alignment of the propeller shaft. (See *Annual Maintenance* also.)
- Have your dealer change the fuel filter after the first 50 hours of operation, and then again at 100 hours. The fuel filter should be changed annually if less than 100 hours are run during the previous season.

Before Each Use

Before the engine has been started:

- Inspect the intake water strainer for blockage. If there is blockage, check the transmission cooler also.
- Check the cooling system level (fresh water cooling-equipped boats only).
- Check the alternator belt for looseness or damage.
- Inspect the battery connections and hold-downs.
- Inspect the drive train for loose or missing hardware.
- Inspect the throttle and shift cables for kinks, wear and interference with other components.
- Inspect the raw water impeller if the boat showed signs of overheating during the last operation.
- Inspect the propeller shaft log for excessive water entry.
- Inspect the fuel system lines and connections for leakage.
- Inspect the exhaust system for leaks.

As you start the engine:

- Check that the voltage registers a fully charged battery.

After running the engine at least five minutes:

- Check the transmission fluid level.
- Check the engine oil level.

Quarterly (Every 50 Hours)

Note: MasterCraft recommends that these functions be performed by factory-trained MasterCraft technicians.

Before the engine has been started or after it has cooled:

- Lubricate the engine starter gear and shaft.
- Check the safety equipment.

After the engine has run at least three minutes:

- Change the engine oil and filter.

Annually (Every 100 Hours)

Note: MasterCraft recommends that these functions be performed by factory-trained MasterCraft technicians.

Before the engine has been started or after it has cooled:

- Clean the engine flame arrestor.
- Replace the fuel filter (trained technician-only function due to pressure in-line).
- Perform an engine tune-up.
- Replace the raw water impeller.
- Replace the ballast pump impeller.
- Check the propeller shaft coupler alignment.
- Lubricate the steering system.
- Lubricate the throttle and shift cables.
- Check the engine mounts.
- Inspect the complete fuel system for leakage.

After the engine has run for at least five minutes:

- Change the engine oil and filter.
- Change the transmission fluid.

Details follow in the next few sections.

MasterCraft recommends that many of these functions be performed by factory-trained MasterCraft technicians!



Before Each Use

Check the Transmission Cooler for Debris

Because this process should be completed while the engine is cool and cannot cause burns to your skin, we recommend you do this before starting your boat.


Step 1: Ensure the engine is OFF and the engine safety starting switch disconnected. Be certain that the throttle/shift control lever is in neutral. Open the engine compartment. The transmission cooler is located either near the top or on the side of the engine.

Step 2: Loosen the clamp surrounding the water intake hose at the back of the transmission cooler and slide off the hose.

Step 3: Check the screen inside for signs of debris. Even small amounts of debris must be removed to prevent the material from clogging the cooler and possibly causing it to malfunction. The screen is permanently in place and your boat must not be operated with any foreign materials blocking the flow of water through the cooler.

Step 4: After cleaning, re-attach the hose and clamp.

Important: This is a critical function of routine maintenance. Even clean-appearing waterways may have debris such as pine needles or moss that can enter the cooling system and create a blockage against this screen. Failure to perform this function can result in serious overheating of the engine. Damage to the engine caused by overheating is not covered by warranty! Always pay attention to your temperature gauge, even if you are carefully performing this check. Blockage of the transmission cooler or a faulty raw water impeller are too-frequent causes of overheating. Water in the transmission may void the warranty!

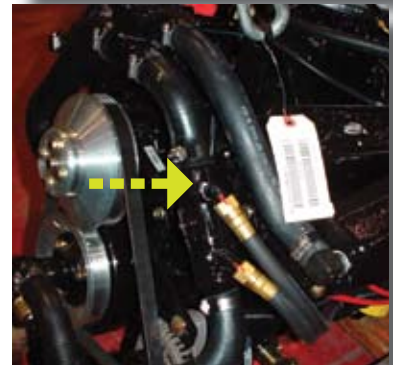

Check the Coolant Level

This procedure applies only to boats equipped with the fresh water cooling system or closed system. Because this process should be completed while the engine is cool and cannot cause burns to your skin, we recommend you do this before starting your boat.

Step 1: Ensure the engine is OFF and the engine safety starting switch disconnected. Be sure the throttle/shift control lever is in neutral. Open the engine compartment and locate the closed cooling system tank adjacent to the engine.

Step 2: Remove the cap and check the level, which should be 2/3 full. If the level is below that, add coolant (**only ethylene glycol or propylene glycol**) in the appropriate mixture with distilled water. **DO NOT** overfill the tank. **DO NOT** mix anti-freeze types. See the Storage and Winterization section of this manual for additional details regarding coolants.

Step 3: If the tank was completely empty, see your MasterCraft dealer for assistance immediately as your engine cooling system needs purging. **This function should be completed only by a trained MasterCraft service technician.**

CAUTION

Failure to maintain your coolant at the proper level can cause engine damage. Your warranty will not cover engine damage due to overheating or any other cause associated with improper coolant levels.



Check the Alternator Belt for Looseness or Damage

Because this process should be completed while the engine is cool and cannot cause burns to your skin, we recommend you do this before starting your boat.

Step 1: Ensure the engine is OFF and the engine safety starting switch disconnected. Be certain that the throttle/shift control lever is in neutral. Open the engine compartment and locate the alternator belt.

Step 2: Check the alternator belt tension at the top, also midway between the circulating pump pulley and at the alternator pulley. The belt should be tight enough so that it will deflect no more than one-quarter to one-half inch when pressed with the thumb or finger.

Note: If the belt is too tight, excessive belt and bearing wear can occur. If the belt is too loose, slippage can occur, resulting in low alternator output and rapid belt wear.

Step 3: If your engine is not equipped with a belt tensioner, loosen the alternator mounting hardware and tighten the hardware. Re-check the belt tension. On engines with serpentine belt systems, however, no change is necessary. Belt tension is maintained by the automatic belt tensioner.

Step 4: Check the underside of the belt that actually runs in contact with the pulleys. Look for signs of excessive wear, cuts or weakness across or in the grooves. If there are any, replace the belt. We recommend contacting your MasterCraft dealer for service assistance.

Inspect the Battery Connections and Hold-Downs

Because poor connections or hold-downs can result in erroneous voltmeter readings, we recommend you do this before starting your boat.

Step 1: Ensure the engine is OFF and the engine safety starting switch disconnected. Be certain that the throttle/shift control lever is in neutral. Locate the battery. Batteries are placed in a variety of locations, depending on the model. Check under the observer seat or behind the rear seat.

Step 2: Check that the battery post connections are clean and tight. If not:

- Loosen and remove the negative terminal connection first. Be careful not to touch the positive terminal with the wrench.
- Loosen and remove the positive terminal connection.
- Remove the battery hold-downs and remove the battery from the boat.
- Clean corrosion from the battery posts with a battery terminal cleaner.
- Clean the battery with a water-and-baking-soda solution. Use care to avoid allowing the solution to enter the battery vents. Rinse the battery with fresh water.



WARNING

Battery electrolyte fluid is dangerous. It contains sulfuric acid, which is poisonous, corrosive and caustic. If electrolyte is spilled or placed on any part of the human body, immediately flush the area with large amounts of clean water and seek medical aid.

- Use a battery terminal cleaning brush to remove corrosion from the inside of the battery terminals. Clean the terminals with a water-and-baking-soda solution and rinse.
- Reconnect the positive terminal first, then the negative. Tighten the terminals. Coat both terminals completely with a thin covering of marine grease. Be sure that the rubber boot covers the positive terminal completely.

Note: Your engine is designed to work with the standard electronics installed in your boat. If you add other electrical components or accessories you could change the way the fuel injection controls your engine or the overall electrical system functions. Before adding electrical equipment, consult your dealer. If you don't your engine may not perform properly.

CAUTION

Add-on equipment may adversely affect the alternator output or overload the electrical system. Any damage caused as a result will not be covered by, and may void, your warranty.

If you ever need a replacement battery, be certain to select a marine battery with at least 750 cold-cranking amps at zero degrees Fahrenheit. Before disconnecting the battery, make sure the ignition key and all accessories are in the OFF position. Also remember to re-attach the cables correctly, with the negative cable connected to the negative or [-] post and the positive cable connected to the positive or [+] post.

WARNING

When charging, batteries generate small amounts of dangerous hydrogen gas. This gas is highly explosive. Keep all sparks, flames and smoking well away from the area. Failure to follow instructions when charging a battery can cause an electrical charge or even an explosion of the battery, which could cause serious injury or death.


MasterCraft recommends the use of a spiral cell type battery, such as the Optima brand. These batteries exceed other batteries in holding and extending a charge.


Inspect the Engine for Loose or Missing Hardware

Because this process should be completed while the engine is cool and cannot cause burns to your skin, we recommend you do this before starting your boat.

Step 1: Ensure the engine is OFF and the engine safety starting switch disconnected. Be certain that the throttle/shift control lever is in neutral. Open the engine compartment and visually inspect the engine.

Step 2: Systematically check the entire engine for loose and missing hardware. Try to shake components by hand such as the alternator and the motor mounts. If a looseness problem exists, see your MasterCraft dealer.

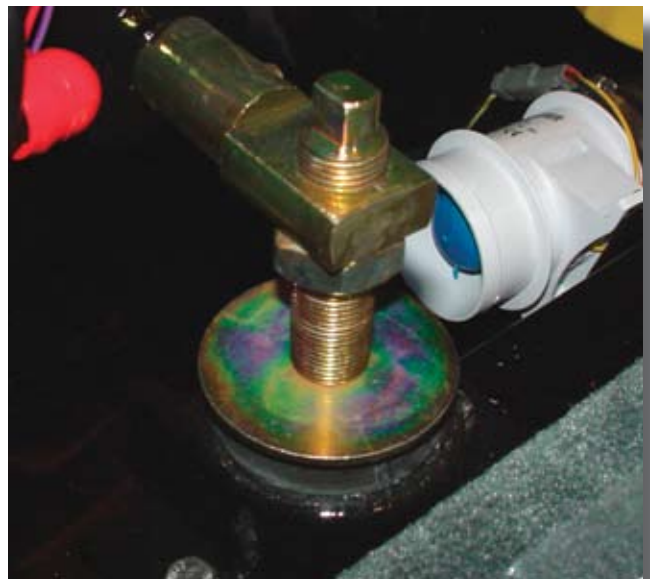

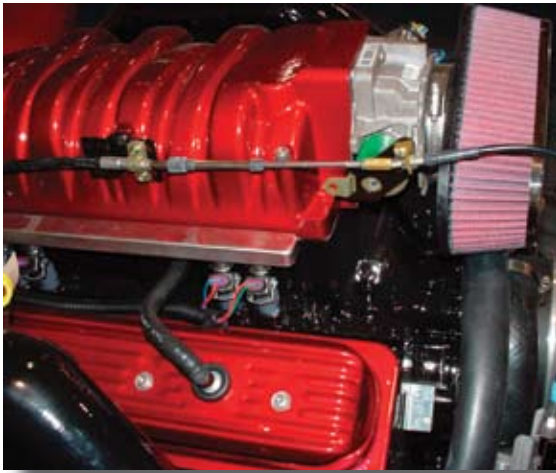

Inspect the Throttle and Shift Cables for Kinks, Wear and Interference (RPT-1 Only)

Because this process should be completed while the engine is cool and cannot cause burns to your skin, we recommend you do this before starting your boat.

Step 1: Ensure the engine is OFF and the engine safety starting switch disconnected. Be certain that the throttle/shift control lever is in neutral.

Step 2: Open the engine compartment and locate the throttle and shift cables. Follow each cable back under the floorboards and feel for any kinks and wear on the outer jacket. Any sign of cable damage is cause for replacement. See your MasterCraft dealer.

Check the Impeller

If the engine has shown evidence of overheating during the previous outing or if overheating occurs during an outing, checking the impeller is imperative!

Because this process should be completed while the engine is cool and cannot cause burns to your skin, we recommend you do this before starting your boat. If checking during an outing, allow the engine to cool somewhat before checking and be very careful to avoid burns from contact with hot engine parts. If the boat is in the water during the check, be sure to close the shut-off valve! Failure to do so could result in excessive water intake that could potentially sink the boat!

Step 1: Ensure the engine is OFF and the engine safety starting switch disconnected. Be certain that the throttle/shift control lever is in neutral. Open the engine compartment and locate the raw water impeller housing.

Step 2: Disconnect the intake and outflow hoses on the raw water impeller housing to check for debris. Reconnect.

Step 3: Remove the screws on the impeller cover and very carefully break the gasket seal. Because a good seal is very important to avoid potentially serious leaks while the engine is in operation, it is advisable to have some new gaskets in the boat's glovebox for such occasions. If even a slight gap exists, you may experience problems in the future, so replacing the gasket is a better idea than taking any chances with an old one. Also, leaving any portion of the old gasket on the housing or cover can impede good contact.



CAUTION


Ignoring elevated temperatures on a temperature gauge or any other evidence of the engine operating at temperatures above recommended levels can result in serious damage to the engine. Any resulting damage will not be covered by, and may void, your warranty!

Step 4: Inspect the inside of the impeller housing. The paddle-wheel should appear as it does in the accompanying photo. If any rubber extrusions on the end of the arm appear frayed or worn, it should be replaced. If there is not a slight bend to the paddle-wheel arms, replace it. Debris entering the impeller will inevitably damage it; but it serves its purpose in keeping debris out of much more expensive internal engine parts.



Step 5: If you are uncertain about the condition of the impeller, remove it and inspect. When installing or re-installing one, you will find it a tight fit. This ensures proper operation. The use of soap or Vaseline will help with installation. You will note that proper placement on the gear results in a squeeze on the arms. This is the correct installation.

Step 6: Place a gasket between the housing and the cover after ensuring that the surfaces are smooth and clean; then re-install the screws in place. Do not over-tighten the brass screws. This can cause them to break.

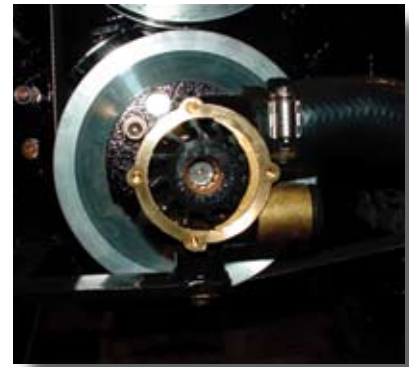

Inspect the Propeller Shaft Log for Excessive Water Entry

After approximately three-to-five minutes of boat operation in the water, shut off the engine and open the engine compartment. Note whether the propeller shaft log appears as it does in the photo at right. If so, the boat is equipped with a dripless shaft log and if it is showing signs of drips, the boat must be taken to a MasterCraft service department for correction.



The engine box serves as a machinery guard. The engine must be OFF whenever the box is open. Clothing or body parts can get caught in moving parts, causing serious injury or death. Keep away from moving parts.

CAUTION

Attention must be paid to any leakage occurring in the propeller shaft log area. Water intrusion into the transmission, which can happen if excessive leakage is occurring, can cause serious damage and void your warranty.

Inspect the Fuel System for Leaks

This inspection requires the operation of the engine with the engine compartment open, thereby creating a potentially dangerous situation. Whenever this inspection is performed, utmost care must be exercised to avoid personal injury or death.

Step 1: Ensure the engine is OFF and the engine safety starting switch disconnected. Be certain that the throttle/shift control lever is in neutral. The engine must be cool.



Gasoline is highly flammable and its vapors may ignite, resulting in fire or explosion. Be sure to keep all sparks and flames well away from the area while inspecting the boat's fuel system.

Step 2: Open the engine compartment and visually check as much of the fuel system from the tank to the engine as you can see.



The engine box serves as a machinery guard. The engine must be OFF whenever the box is open. Clothing or body parts can get caught in moving parts, causing serious injury or death. Keep away from moving parts!

Step 3: **This inspection requires the operation of the engine with the engine compartment open and should be performed by your MasterCraft dealer.** Your dealer will start the engine with the engine compartment open and look for signs of leakage. Because the fuel system is under pressure, any leaks should be quickly noticeable. If any leaks are observed the engine must be immediately shut down. The leak must be repaired before the engine is restarted. See your MasterCraft dealer for parts and service. *Because the lines on late model MasterCraft boats are pressurized, they can be disconnected and/or removed ONLY by using specialized tools that are not available to the public.*

This is important! Fuel leakage can lead to a build-up of potentially explosive fumes within the engine compartment. DO NOT IGNORE NOR OVERLOOK THIS INSPECTION AND REPAIR AS NECESSARY!

Inspect the Exhaust System for Leaks

This inspection requires the operation of the engine with the engine compartment open, thereby creating a potentially dangerous situation. When this inspection is performed, utmost care must be exercised to avoid personal injury or death.

Step 1: Ensure that the engine is OFF and that the engine safety starting switch is disconnected. Be certain that the throttle/shift control lever is in neutral. The engine must be cool.



The engine box serves as a machinery guard. The engine must be OFF whenever the box is open. Clothing or body parts can get caught in moving parts, causing serious injury or death. Keep away from moving parts.

Step 2: Open the engine compartment and visually check the exhaust system from the engine to the transom for any obvious damage to exhaust lines or the muffler.

Step 3: If leakage is apparent, tighten the hose clamps, being careful to avoid crimping the hose. If the leakage is significant, or is occurring at a location other than the joints (such as a split in a hose), see your MasterCraft dealer for parts and service. This is important! Exhaust fumes can cause illness or impairment, including carbon monoxide poisoning. Equally important to consider, leakage can lead to a build-up of potentially explosive fumes within the engine compartment. **DO NOT IGNORE NOR OVERLOOK THIS INSPECTION! REPAIR AS NECESSARY!**

Check That the Battery Is Fully Charged

As you start your boat, check all gauges, but pay particular attention to the voltmeter.

While starting the engine, check that the voltmeter reads between 12.4 and 14.5. An erratic reading can be a sign of low voltage. The voltmeter is your best indication of the state of your battery. It is not fool-proof, however. While the reading will indicate that the battery is producing current, if in a previous operation you had reason to suspect a problem with your battery, check with your MasterCraft dealer.



The 2007 models are equipped with a low-voltage battery alarm. In the event that the stereo has been functioning when the boat is not ON and running, the voltage drain on the battery can result in difficulties re-starting the boat. To avoid this situation, when the voltage level reaches a set level of 11.5 volts, the system will shut off the stereo system and sound the alarm for a period of two minutes to give boats ample time to adjust.

If you have a dead battery, charge it with a battery charger before attempting to start the engine. Jump-starting from another boat or battery is dangerous. Charging a dead battery with the alternator on your engine will put undue stress on the alternator, which may cause it to fail.

WARNING

When charging, batteries generate small amounts of dangerous hydrogen gas. This gas is highly explosive. Keep all sparks, flames and smoking well away from the area. Failure to follow instructions when charging a battery can cause an electrical charge or even an explosion of the battery which could cause serious injury or death.

CAUTION

Crossing cables or jumper cables can result in damage to the electrical components due to incorrect battery connections. Such damages are not covered by your warranty.



Check the Engine Oil Level

Because you will get an accurate reading only after the engine has run long enough to thoroughly warm up (to at least 140 degrees F), this should be one of the last checks you conduct before boating. Run the engine in the water. If you are checking the transmission fluid at the same time, run the engine at least five minutes in the water (to warm the transmission fluid), and check the fluid immediately after shutting down to get an accurate reading for that. As long as you will be checking the oil fairly quickly (within two minutes of shutting off), there is no need to re-start and run the engine again.

Step 1: After operating the engine at idle while in the water for at least three minutes or until warm, turn the engine OFF and disconnect the engine safety starting switch. Open the engine compartment. The engine oil dipstick is located on one side of the engine.

Step 2: Allow two minutes before checking. Then remove the dipstick and wipe it off. Insert it fully and immediately remove. Check that the oil level is between the ADD and SAFE marks on the dipstick.

Step 3: Add oil, if necessary, through the valve cover and only enough to bring to the SAFE mark on the dipstick. **Overfill may result in damage to the engine that is not covered by warranty.** Use SAE 15W40, API SJ/CH4 oil. 20W40 oil may be substituted but only if it meets the API SJ/CH4 standards. Below 20 degrees Fahrenheit, use SAE 10W30 SJ/CD type oil if the engine will be running. **DO NOT USE OIL ADDITIVES AT ANY TIME.**

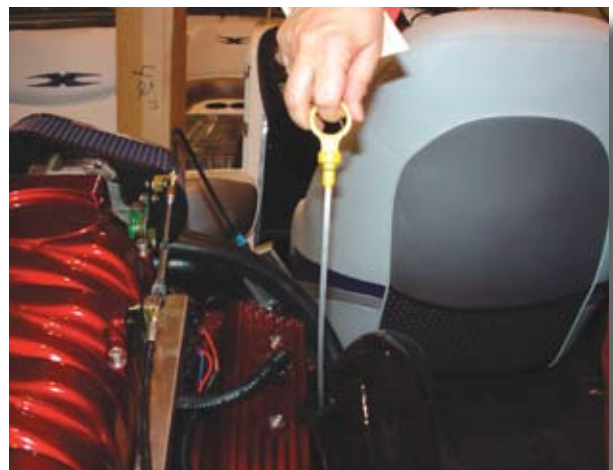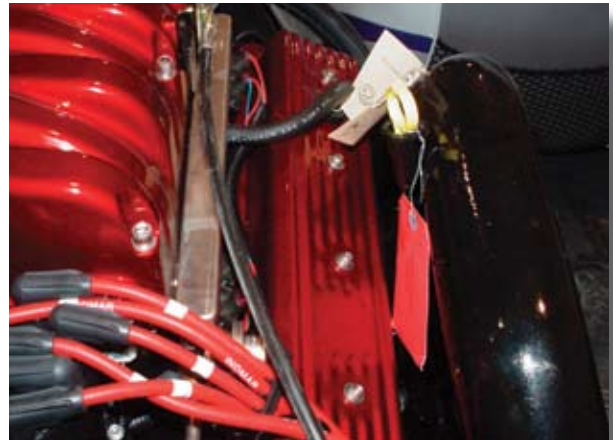

Check the Transmission Fluid Level

Because you will get an accurate reading only after the engine has run long enough to thoroughly warm up, this should be one of the last checks you conduct before boating. Run the engine in the water at least five minutes, and check the fluid immediately after shutting down to get an accurate reading.

Step 1: After operating the engine at idle while in the water for at least five minutes or until warm, turn the engine OFF and disconnect the engine safety starting switch. Be sure the throttle/shift control lever is in neutral. Open the engine compartment and locate the transmission dipstick.

Note: The transmission fluid level must be checked immediately after the engine shut-down to prevent an incorrect reading. Fluid drains back into the transmission from the cooler and cooler lines, and the dipstick could give a false reading if not done quickly.

Step 2: Remove the dipstick and wipe it off with a clean rag. Quickly re-insert it fully and immediately remove. Check that the level is at the FULL WARM mark on the stick.

Step 3: Add or remove fluid as necessary to maintain the level at the mark. It is as important to avoid overfilling the transmission fluid as it is to avoid underfilling. Use only the recommended automotive-type transmission fluid. Check with your MasterCraft dealer for the specifications. Never mix different types or brands of fluid! The manufacturer specifies Dextron-III fluid in the direct drive 1:1 transmission and 15W40 motor oil in the V-drives and gear-reduction transmissions.



Quarterly (Every 50 Hours)

MasterCraft recommends that your quarterly—or 50 hour—maintenance requirements be performed by your MasterCraft dealer. The staff there has the proper equipment and technical training to best meet your service needs.

Lubricate the Engine Starter Gear and Shaft

Because this process should be completed while the engine is cool and cannot cause burns to your skin, we recommend you do this before starting the boat.

Step 1: Ensure the engine is OFF and the engine safety starting switch is disconnected. Be certain that the throttle/shift control lever is in neutral. The engine must be cool.

Step 2: Disconnect the positive (+) battery terminal.

Step 3: Open the engine cover and locate the starter on the lower starboard side of the engine.

Step 4: Disconnect the starter and carefully remove it.

Step 5: Lubricate the starter bendix with a light coating of water-proof grease or white lithium grease.



Step 6: Return the starter to the engine and reconnect. After closing the engine compartment, reconnect the positive (+) battery terminal.

MasterCraft recommends that your quarterly—or 50 hour—maintenance requirements be performed by your MasterCraft dealer. The staff there has the proper equipment and technical training to best meet your service needs.

Change the Engine Oil

In order to thoroughly drain all the old oil, you will need to run the boat engine long enough to reach at least 140 degrees F (approximately three minutes in most applications), before changing the oil. Do not run your engine without it being in water, unless you have the appropriate professional hook-up available to protect the engine and drive-train components. If this is not available to you, have your MasterCraft service technician perform this service.

Step 1: Ensure the engine is OFF and the engine safety starting switch disconnected. Be certain that the throttle/shift control lever is in neutral. The engine must be warm.

Step 2: Open the engine compartment and locate the oil drain hose, which runs from the bottom of the oil pan along the port side of the engine. At the end of the oil drain hose is a brass plug.

Note: Never drain oil into the bilge or into the water. Wipe up any spilled oil immediately, and dispose of the rags and drained oil in a proper manner on-shore.

Step 3: Remove the engine oil cap located on the valve cover. This will speed up the oil-draining process.


Step 4: Remove the bilge drain plug to drop the drain hose through the hole. Drain the oil into a container on the ground. (On some V-drive models, you will thread the line through a hole that runs through the lower edge of the transom).

Step 5: Loosen the brass end cap to allow the oil to drain; be careful to avoid rounding off the edges of the brass end cap.

Step 6: The oil filter should be changed each time the oil is changed. Remove the oil filter and dispose of it properly on-shore.

Step 7: Fill a new MasterCraft oil filter about half full with clean engine oil. Lightly lubricate the oil filter gasket and spin the filter on until the gasket makes contact. Hand tighten the filter one-quarter to one-half turn after contact. **DO NOT** use a filter wrench to tighten.

Step 8: Re-attach the oil drain plug to the end of the hose and refill the crankcase through the oil cap opening on the valve cover. Check the oil level with the dipstick. If this is the initial quarterly oil change, re-attach a cable tie around the oil drain hose and the water line on the port side of the engine as it came from the factory, to keep the line from coming in contact with any hot areas.

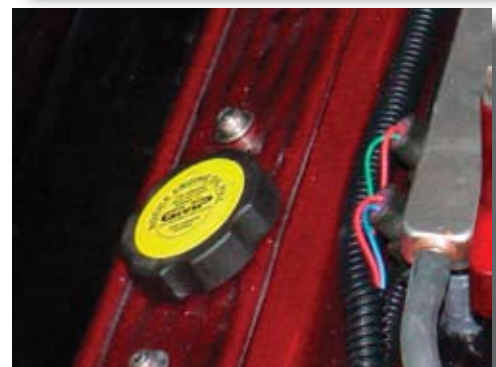

Step 9: The first time you re-start the engine when it is back in the water, check the area around the filter for any leaks.

Step 10: Stop the engine and re-check the oil level. Add more oil if necessary.

Note: The engine oil recommendation for all engines is SAE 15W40 oil, rated at SJ/CH4. This rating requires oils to have higher additive levels than typical gasoline engine oils to compensate for potential thinning or fuel dilution. Any other rating other than SJ-CH4 may result in damage or excessive wear to the engine and should be avoided!

CAUTION

Failure to follow the engine oil recommendation listed in the manual can cause additional engine wear and increase the possibility of engine component failure. Damage to your engine due to incorrect oil usage can be costly to repair, and is not covered by your warranty!

ANNUALLY (Every 100 Hours)

MasterCraft recommends that your annual—or 100 hour—maintenance requirements be performed by your MasterCraft dealer. The staff there has the proper equipment and technical training to best meet your service needs.

Annual Maintenance

Some boat owners choose to execute some maintenance procedures on their boats. We have provided information on several procedures. For safety reasons, a few must be performed by MasterCraft service technicians only, such as anything involving checks and repairs on the fuel line, which is under pressure.

Regardless of whether you choose to do some of the maintenance work yourself or have it completed by a technician, these matters must be addressed on a regular basis, at 100 hours or annually, whichever comes first.

These procedures are in addition to seasonal preparation and winterization (see Winterization section for additional details). All of these issues are extremely important to your continued boating pleasure, as well as long life for your boat and the critical matter of safety.

Even if you plan to have annual maintenance work completed by your MasterCraft service technician, you still should review this section and ensure that you have some understanding of what is necessary to keep your boat in top condition.

Clean the Engine Flame Arrestor

MasterCraft recommends that you have the flame arrestor inspected and cleaned by your dealer immediately prior to starting the boating season. This procedure is extremely important and should be performed at least once a year.

There may be instances in which you need to check this yourself. If you have had evidence of material collecting inside the flame arrestor in the past, you should check yours more often than annually, particularly after the boat has been sitting for an extended period of time. The flame arrestor serves as a trap for airborne materials that might otherwise enter the engine and cause damage. However, if your boat sits for a while, small creatures may crawl inside and build a nest.

Be very careful while removing and while the flame arrestor is off the engine that absolutely nothing foreign enters the engine through the area normally covered by the flame arrestor. Any materials entering can cause damage to your engine and will void your warranty.

Because this process should be completed while the engine is cool and cannot burn your skin, we recommend this be done before starting the boat.

Step 1: Ensure the engine is OFF and the engine safety starting switch is disconnected. Be certain that the throttle/shift control lever is in neutral. The engine must be cool.

Step 2: Carefully remove the flame arrestor from the back of the engine using a screwdriver on the clamp screw.

Step 3: Tap the element to dislodge any large embedded dirt and then gently brush with a soft bristle brush.

Note: Do not use gasoline, steam, caustic cleaning solution, strong detergent, high-pressure car wash or parts cleaning solvents. Any of these can harm the cotton filter media, as well as shrink and harden the rubber end caps.

Step 4: Either spray on K&N air filter cleaner or allow the air filter to soak in a pan filled with air filter cleaner. Allow the cleaner to work for approximately 10 minutes.

Step 5: Rinse off the filter with low-pressure water. Tap water is okay. Always flush from the clean side to the dirty side. This removes the dirt and does not drive it into the filter.

Step 6: Always dry naturally. After rinsing, shake off all excess water and let the element dry naturally.

Note: Do not use compressed air, open flame nor heat dryers. Excess heat will shrink the cotton filter media. Compressed air will blow holes in the element.

Step 7: After cleaning the air filter, always re-oil before using. Spray K&N air filter oil down into each pleat with one pass per pleat. Wait 10 minutes and re-oil any white spots still showing. Or use the oil from a squeeze bottle, down into the bottom and along each pleat with just one pass in each pleat. Let the oil work into the cotton for 20 minutes. Re-oil any white spots still showing.

Note: Never use the K&N air filter without oil. The filter will not stop the dirt without the oil. Red dye is added to K&N air filter oil to assist in determining whether you have complete coverage after application. Never use automatic transmission fluid, motor oil, diesel fuel, WD-40, LPS or other lightweight oils for this purpose.

Step 8: Re-install. Make sure the element seats properly before tightening the clamp screw.


MasterCraft recommends that your annual—or 100 hour—maintenance requirements be performed by your MasterCraft dealer. The staff there has the proper equipment and technical training to best meet your service needs.



Replace the Raw Water Pump Impeller

Change the raw water pump impeller annually. This is extremely important! Through normal wear and tear, the impeller usually lasts no more than one season, even under ideal conditions. If it does not function properly—and it will not when it is worn—it can cause serious engine overheating and potentially void your warranty!

MasterCraft recommends that this procedure be performed by a MasterCraft service technician. If, however, you wish to complete this function yourself, detailed instructions are included under *Before Each Use, Check the Impeller* section of this manual, where documentation was provided to assist boat owners who experience overheating problems or who boat in “dirty” water.

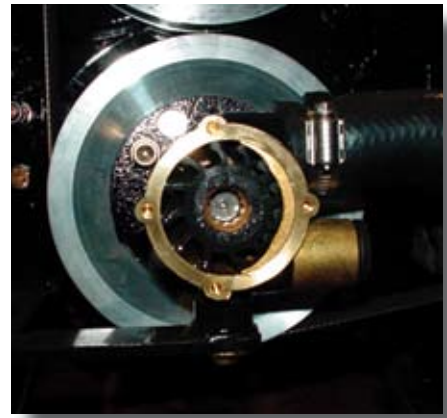

Have an Engine Tune-Up Performed

A complete engine tune-up, including replacement of the PVC valve, spark plugs, distributor cap, rotor and ignition wires (if needed) should be performed annually. Also, some engines require adjustments for spark, dwell and idle. All of these functions require special knowledge, tools and test equipment.

For this reason, MasterCraft strongly recommends having the engine tune-up performed by your dealer.

Change Transmission Fluid

In order to thoroughly drain all the old transmission fluid, you will need to run the boat engine for a period of at least five minutes. Do not run your engine without it being in water, unless you have the appropriate professional hook-up available to protect the engine and drive-train components. If this is not available to you and if you do not wish to run your boat in the water and then remove it for this procedure, have your MasterCraft service technician perform this function because he has the proper equipment to protect your engine as it runs while it is out of the water.

Step 1: Ensure the engine is OFF and the engine safety starting switch is disconnected. Be certain that the throttle/shift control lever is in neutral. The transmission fluid must be warmed up.

Step 2: Open the engine compartment and locate the transmission.

Step 3: Remove the transmission dipstick.

Step 4: Use a suction pump through the transmission dipstick opening to remove the fluid from the transmission casing.

Step 5: **On a 1:1 transmission,** the filter is located beneath the transmission housing.

On a PowerSlot transmission, the filter is accessed through a round plug on the side of the transmission housing.



On a V-drive transmission, the filter is accessed through a round plug on the side of the transmission housing.

Step 6: On a 1:1 transmission, remove and clean the screen. When re-installing, use and ensure that the gasket is placed correctly, after replacing the filter.

Step 7: The following chart shows what type of fluid is needed for your change. (If your transmission is not listed here, check with your MasterCraft dealer for specifications on capacities and recommended fluid type.)

Transmission	Model	Ratio	Capacity	Fluid Type
ZF Hurth in-line	450D	1:12	1.7 qt. (1.6L)	Dexron II, III or MECON
ZF Hurth in-line	450A	1.5:1	2.12 qt. (2L)	15W40 motor oil
ZF Hurth in-line	630A	1.5:1	4.2 qt. (4L)	15W40 motor oil
ZF Hurth V-drive	G30V		4.2 qt. (4L)	15W40 motor oil


Note: Access to the transmission fluid filters is somewhat difficult in some models; nonetheless, this maintenance is vital to long-term, trouble-free boating. If you feel that you cannot complete this process, contact your dealer.

Check the Engine Mounts

Step 1: Ensure the engine is OFF and disconnect the engine safety starting switch. Be sure that the throttle/shift control lever is in neutral. The engine must be cool.

Step 2: Open the engine box and locate the four motor mounts.

Step 3: Check the tightness of the mounting hardware and adjustment lock-nuts. Tighten any loose hardware securely.

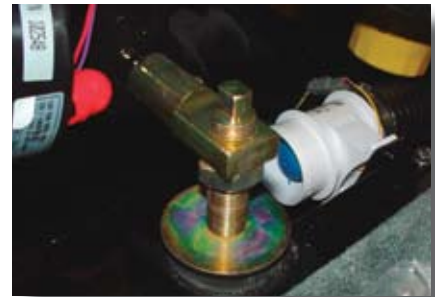

Check the Propeller Shaft Coupling Alignment

MasterCraft late-model boats are equipped with a dripless propeller shaft log. If it is showing signs of drips, it must be corrected by the MasterCraft service technician.

Inspect the Exhaust Flaps for Damage

Step 1: Ensure the engine is OFF and disconnect the engine safety starting switch. Be sure that the throttle/shift control lever is in neutral.

Step 2: Inspect the exhaust flap hinge for signs of deterioration. Replace the flap if necessary.



Lubricate the Steering System

Because this process should be completed while all moving components of the drive train are NOT in motion, we recommend you do this while the boat is out of the water.

Step 1: Ensure the engine is OFF and disconnect the engine safety starting switch. Be sure that the throttle/shift control lever is in neutral. The engine must be cool.

Step 2: Remove the access panel in the rear trunk compartment.



Step 3: Turn the steering wheel so that the maximum amount of steering cable is seen.

Step 4: Use solvent to clean old lubricant from the cable end, pivot and rudder shaft.

Step 5: Spread a generous amount of white lithium grease over the cable end. Work the steering wheel back and forth and re-apply grease if necessary.

Step 6: Using the flexible end on a grease gun, give two full shots of white lithium grease to the two grease fittings: one on the rudder shaft, and one on the pivot. Clean up any old grease purged from the areas.

Step 7: Rotate the steering wheel back and forth several times to work the lubricant in.

Step 8: Re-install the access panel.

Lubricate the Shift and Throttle System

Because this process should be completed while all moving components of the drive train are not in motion, we recommend you do this while the boat is out of the water.

Step 1: Ensure the engine is OFF and disconnect the engine safety starting switch. Be sure that the throttle/shift control lever is in neutral. The engine must be cool.

Step 2: Open the engine box and locate the shift and throttle cable ends.

Step 3: Shift to full-throttle-forward.

Step 4: Lubricate the cable ends and connections with a coating of waterproof marine multi-purpose grease.

Step 5: Lubricate the pivots and linkages with a light grease.

Step 6: Shift the control lever from full-throttle-forward to full-throttle-reverse several times to work the lubricant in.



Check the Ballast Pump Impeller

This applies only to boats equipped with some type of ballast system. The number of ballast pumps varies from system to system. You may need guidance from your dealer to locate any and all pumps.

Step 1: Remove two of the cover screws and retain the screws for the reinstallation process. Swing the cover out of the way to allow access to the impeller location.

Step 2: Using the needle-nose pliers, pull the old impeller out of the casing.

Step 3: Install a new impeller. (It is intentionally larger than the case. While gently squeezing it in, ensure that the paddle wheels angle in the same direction—counterclockwise—all the way around.)

Step 4: Slide the plate back into place. No silicone is necessary. Due to the built-in gasket, tightening the screws should prevent leakage.


Inspect the Complete Fuel System for Leakage

Although your boat engine is similar to your automobile engine, the engine compartment differs substantially. The underside of your automobile engine compartment is totally open to the atmosphere. This allows complete air circulation and ventilation. Your boat engine is housed in a closed compartment, the underside of which is the bottom (hull) of the boat.

The enclosed engine compartment limits the ventilation of gasoline and oil fumes. Because confined gasoline vapors mixed with a little air can form an explosive atmosphere, it is important to be especially vigilant in performing the following two operations:

Step 1: Run your bilge blower for at least four (4) minutes to ventilate the bilge area each time before starting the engine.

Step 2: Inspect your boat bilge area under the engine for the evidence of oil and gasoline—or any gasoline odor. This inspection should take place the first time the boat is started each day. Raise the engine cover and visually look at the bilge area under the engine.

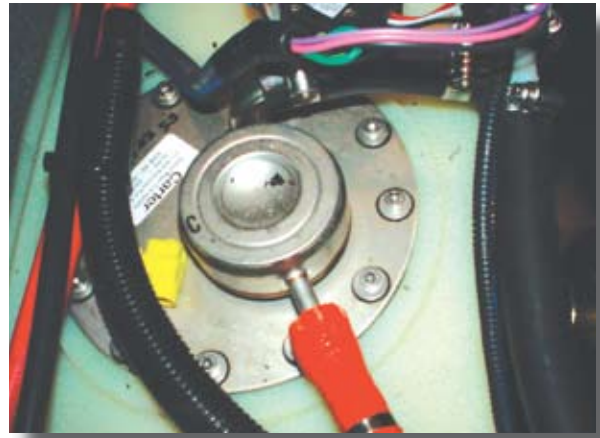

Gasoline is explosive. If you see or smell the presence of gasoline during your inspection, **DO NOT START YOUR ENGINE!** Remove your ignition key from the ignition switch and call your MasterCraft dealer for service.

Note: If you notice loose fuel fittings, deteriorated lines or other problems associated with the fuel system, call your MasterCraft dealer. Fuel system service on later-model MasterCraft boats require special service tools and special training. Due to the potential for serious consequences when errors occur in servicing the fuel system, MasterCraft strongly encourages all boat owners to seek professional assistance from your MasterCraft service department whenever any service or perceived problems occur within the fuel system.



All replaced fuel components must meet United States Coast Guard (“USCG”) and American Boat & Yacht Council, Inc. (“ABYC”) standards, and must be Underwriter’s Laboratory (“UL”)-approved. Inferior quality components pose a serious safety threat to you and others, and the use of inferior components may result in serious injury or death. Resulting damage may void your warranty.

Engine Emissions

The following information pertains to the Indmar engine utilized in many MasterCraft models. If your boat features a Crusader engine, please refer to the manual supplied by that manufacturer.

The inboard engine in your boat includes the Indmar Emission Control System identified as MFI or TBI or EM. Refer to the identification sticker on your engine to determine which emission control system was used on your engine. The fuel and ignition systems on your engine meet the stringent requirements set forth by the California Air Resources Board (CARB). Indmar also uses Sierra brand anti-freeze in the closed cooling system of your engine to reduce the environmental impact in the event that anti-freeze is expelled from the engine.

Your Indmar-manufactured engine has a special environmental label required by the California Air Resources Board (CARB). The label has 1, 2, 3 or 4 stars. A hangtag, provided with your inboard engine, describes the meaning of the star system.

Operating Fuels and Lubricants

In order to keep your engine operating efficiently and to maintain the Emission Control System the following requirements must be observed.

Fuel—Your engine was designed and certified to operate on the unleaded fuels listed below. Fuel ratings must be based on the (R+M)/2 method and meet the specifications ASTM D4814 in the U.S. These fuels need no additives for proper operation.

MasterCraft LY6 engine 93 octane

All other MasterCraft Indmar engines 89 octane

Lubricant—Indmar uses and recommends 15W40 marine oil for use in all of its engines, meeting the API ratings of CF/SJ, CG-4, CH-4. See the Operator's Manual for information regarding the use of synthetic oil.

Additives—The only additive that is recommended by Indmar for use in your engine is Sta-Bil brand fuel stabilizer. This additive helps preserve the fuel in your tank and in the engine's fuel system. We recommend the use of Sta-Bil during off-season storage and for the boat that will consume less than a full tank of fuel every two weeks. See the Fuel section of your Operator's Manual.

Emission Components Warranty

The following components are considered as part of the emissions control system and are covered under the Emissions Control Warranty.

1. Fuel metering system

- a. Fuel injectors
- b. Fuel pressure regulator
- c. Manifold absolute pressure (MAP) sensor
- d. Throttle position sensor
- e. Idle air control (IAC) valve
- f. Throttle body – port fuel injection models
- g. Throttle body assembly – throttle body fuel injection models
- h. Coolant temperature sensor
- i. Intake valves

2. Air Induction System

- a. Intake manifold
- b. Air filter (flame arrestor)

The Star Label means Cleaner Marine Engines





This engine has been certified as:



The Symbol for Cleaner Marine Engines:

- Cleaner Air and Water
For a healthier life-style and environment.
- Better Fuel Economy
Burns up to 30-40 percent less gas and oil than conventional carbureted two-stroke engines, saving money and resources.
- Longer Emission Warranty
Protects consumer for worry-free operation.

3. **Ignition System**
 - a. Spark plugs
 - b. Electronic ignition system
 - c. Ignition coil and/or control module
 - d. Ignition wires
4. **Lubrication System**
 - a. Oil pump and internal parts
5. **Positive Crankcase Ventilation (PCV) System**
 - a. PCV valve
 - b. Oil filler cap
6. **Exhaust System**
 - a. Exhaust manifold(s)
 - b. Exhaust riser(s)
 - c. Exhaust valves
7. **Miscellaneous Items Used on Above Systems**
 - a. Hoses, clamps, fittings, tubing, sealing gaskets or devices and mounting hardware
 - b. Electronic controls
 - c. Electronic control module
 - d. Pulleys, belts and idlers

	<p>One Star-Low emission The one-star label identifies engines that meet the Air Resources Board's Personal Watercraft and Outboard Marine Engine 2201 exhaust emission standards. Engines meeting these standards have 75% lower emissions than conventional carbureted two-stroke engines. These engines are equivalent to the U.S. EPA's 2006 standards for marine engines.</p>
	<p>Two Stars-Very Low emission The two-star label identifies engines that meet the Air Resources Board's Personal Watercraft and Outboard marine engine 2004 exhaust emission standards. Engines meeting these standards have 20% lower emission than One-Star Low Emission engines.</p>
	<p>Three Stars-Ultra Low emission The three star label identifies engines that meet the Air Resources Board's Personal Watercraft and Outboard Marine Engine 2008 exhaust emission standards or the Sterndrive and Inboard Marine Engine 2003-2008 exhaust emission standards. Engines meeting these standards have 65% lower emissions than One Star-Low Emission engines.</p>
	<p>Four Stars-Super Ultra Low emission The four star label identifies engines that meet the Air Resources Board's Sterndrive and Inboard marine engine 2009 exhaust emission standards. Personal Watercraft and Outboard Marine Engines may also comply with these standards. Engines meeting these standards have 90% lower emissions than One Star-Low Emission engines.</p>

NOTE: The repair or replacement of any warranted part otherwise eligible for warranty coverage under the Emission Control Warranty may be excluded from such warranty coverage if Indmar demonstrates that the engine has been abused, neglected, or improperly maintained and that such abuse, neglect or improper maintenance was the direct cause of the need for repair or replacement of the part.

The emission warranty covers damage to other engine components that is caused by the failure of a warranted part.

The Indmar Operator's Manual provided contains written instructions for the proper maintenance and use of your inboard engine. All emission warranty parts are warranted by Indmar for the entire warranty period of the engine, unless the part is scheduled for replacement as required maintenance in the Operator's Manual.

Emission warranty parts that are scheduled for replacement as required maintenance are warranted by Indmar for the period of time before the first scheduled replacement date for that part. Emission warranted parts that are scheduled for regular inspection, but not regular replacement, are warranted by Indmar for the entire warranty period of the inboard engine.

Any emission warranty part repaired or replaced under the terms of this warranty statement is warranted by Indmar for the remainder of the warranty period of the original part. All parts replaced under this limited warranty become the property of Indmar.

If the ownership of a product is transferred during Emission Components Warranty period, this warranty shall also be transferred and be valid for the remaining coverage period provided that Indmar is notified in the following way:

- a. The former owner contacts Indmar and provides us with the required information listed below; or
- b. Indmar receives proof that the former owner agreed to the transfer of ownership and we are provided with the information listed below.

-Current owner's name, address, telephone number, engine serial number and date of purchase.

-New owner's name, address, telephone number, engine serial number and date of transfer.

Send the above information to:
 Indmar Products
 5400 Old Millington Road
 Millington TN 38053
 Attn: Emission Warranty Transfer

NOTE: The above procedure is valid for the transfer of the Emission Components warranty only. Refer to the Limited Warranty Section in this manual for information regarding warranty transfer of the remaining engine components.

Emission Maintenance Requirements

The following procedures are required to maintain the Emission Control System of your engine:

- Engine oil and filter:** Change oil and filter after the first 10 hours; then every 50 hours or annually, whichever occurs first.
- Spark plugs:** Replace every 300 hours or annually, whichever occurs first.
- PCV valve:** Replace every 300 hours or annually, whichever occurs first.
- Flame arrestor:** Clean every 100 hours. Replace as necessary.
- Spark plug wires:** Inspect annually. Replace as necessary.

Emission Component Part Numbers

Following are the Indmar part numbers for the Emission Maintenance Components (parts can be ordered only through an authorized MasterCraft dealer; parts cannot be ordered directly from the factory).

MasterCraft RPT-1:

Engine Oil:	81871001
Oil Filter:	81501001
Spark Plugs:	81556119 AC (41-932)
PCV Valve:	81506001
Flame Arrestor:	81521119
Plug Wires:	81756002
Distributor Cap:	81556083
Distributor Rotor:	81556084

(Parts must be ordered through an authorized MasterCraft dealer.)

MasterCraft MCX:

Engine Oil:	81871001
Oil Filter:	81501001
Spark Plugs:	81556119 AC (41-932)
PCV Valve:	81506001
Flame Arrestor:	81525011
Plug Wires:	81756002
Distributor Cap:	81556083
Distributor Rotor:	81556084

(Parts must be ordered through an authorized MasterCraft dealer.)

MasterCraft LY6:

Engine Oil:	81871001
Oil Filter:	81501001
Spark Plugs:	81556188 (AC41-974)
PCV Valve:	81551364
Flame Arrestor:	81525021
Plug Wires:	81751202
Distributor Cap:	N/A
Distributor Rotor:	N/A

(Parts must be ordered through an authorized MasterCraft dealer.)

MasterCraft 8.1L:

Engine Oil:	81871001
Oil Filter:	81501001
Spark Plugs:	81556198 (AC41-983)
PCV Valve:	N/A
Flame Arrestor:	81525011
Plug Wires:	81756003
Distributor Cap:	N/A
Distributor Rotor:	N/A

(Parts must be ordered through an authorized MasterCraft dealer.)

Emission Maintenance Procedures are explained in the Indmar Operator's Manual.

California Emission Control Warranty Statement Your Warranty Rights and Obligations

The California Air Resources Board and Indmar Products are pleased to explain the emission control system warranty on your inboard engine. In California, new inboard engines must be designed, built and equipped to meet the State's stringent anti-smog standards. Indmar Products must warranty the emission control system in your inboard engine for the time listed below, provided there has been no abuse, neglect or improper maintenance of your inboard engine.

Your emission control system may include parts such as the carburetor or fuel injection system, the ignition system, and catalytic converter. Also included may be hoses, belts, connectors and other emission-related assemblies.

Where a warrantable condition exists, Indmar Products will repair your inboard engine at no cost to you, including diagnosis, parts and labor.

Manufacturer's Warranty Coverage

Select emission control parts from a model-year 2003-2008 inboard engines are warranted for two (2) years.

Select emission control parts from model-year 2009 and later are warranted for three (3) years.

However, warranty coverage based on the hourly period is only permitted for outboard engines and personal watercraft equipped with appropriate hourmeters or their equivalent. If any emission-related part on your engine is defective under warranty, parts will be repaired or replaced by Indmar Products.

Owner's Warranty Responsibilities

As the inboard engine owner, you are responsible for the performance of the required maintenance listed in your owner's manual. Indmar Products recommends that you retain all receipts covering maintenance on your inboard engine, but Indmar Products cannot deny warranty solely for the lack of receipts or your failure to ensure the performance of all scheduled maintenance.

As the inboard engine owner, you should be aware that Indmar Products may deny you warranty coverage if your inboard engine or part has failed due to abuse, neglect, improper maintenance or unapproved modifications.

You are responsible for presenting your inboard engine to an Indmar Products distribution center as soon as a problem exists. The warranty repairs will be completed in a reasonable amount of time, not to exceed 30 days.

If you have any questions regarding your warranty rights and responsibilities, you should contact the Indmar Director of Customer Service at 1-901-353-9930.

NOTE: Adjusting engine timing should not be attempted unless you have the proper tools and equipment. An improperly timed engine can be severely damaged. Do not attempt to start the engine unless the boat is in the water or an adequate supply of cooling water is applied directly to the cooling water intake.

Electronic Fuel-Injected Engines

Note: The MasterCraft RTP-1, LQ9 and 8.1 Liter engines do not have adjustable timing.

1. Start engine.
2. Attach an appropriate inductive pick-up timing light to the number one cylinder spark plug wire.
3. Put the engine into base timing mode by running a jumper wire from pin "A" to pin "B" on the engine data link connector. The idle should automatically adjust to 900-1100 RPM.

NOTE: Due to variations in Diagnostic Scan Tools, Indmar prefers using this method of placing the ECM in base timing mode.

3. Set the timing to 10 degrees BTDC by loosening the distributor hold-down bolt and rotating the distributor until the timing pointer indicates 10 degrees BTDC.
4. Remove the jumper from the data link connector. The idle RPM should return to normal.
5. Shut down the engine and leave it off for 15 seconds.
6. Repeat steps 1-4 to verify timing.

Storage & Winterization

Storage or winter lay-up requires special preparation to prevent damage to the boat. Since winter storage is an annual event, it presents an excellent opportunity to perform the annual maintenance at this time.

Without proper preparation, storage for long periods of time may cause internal parts of the engine and transmission to rust because of lack of lubrication. Also, if the boat has been stored in below-freezing temperatures with water inside the bilge or engine cooling system, including the heater or shower, this condition could result in major damage from freezing.

Also, refer to the section regarding oil changes. Your boat should have an oil change performed immediately prior to storage to prevent potential damage to your engine.

The following procedures will help avoid most potential types of damage for a period not to exceed five (5) months!

CAUTION

Because of the complexity of preparing your boat for proper winter storage, as well as the possibility of extreme damage to the engine if a preparation error was made during winterization, MasterCraft recommends that you schedule an appointment with your local MasterCraft dealer and permit the dealer to perform the winterization procedures.

To properly winterize your engine, you **MUST** be able to bring the engine up to operating temperature. To accomplish this, your boat must be in the water or attached to a water supply using a hose and suitable adapter that will allow an uninterrupted supply of water to the engine.

General Preparation

Before starting you will need the following supplies:

- Sta-Bil Gasoline Stabilizer
- Six (6) quarts of specified engine oil (*see engine oil change instructions elsewhere in this manual*)
- Appropriate oil filter for your engine (*see Specifications elsewhere in the manual or contact your dealer*)
- Fuel filter
- Low tack tape
- Four to six ounces of fogging oil
- One (1) can of corrosion protectant and lubricant
- Transmission oil (*if needed*)
- Multi-purpose grease
- Short piece of stiff wire such as coat hanger wire
- Pip thread sealant
- Anti-freeze tester suitable for propylene glycol anti-freeze (*fresh-water cooled engines only*)
- Anti-freeze (*see elsewhere in this manual for more details regarding acceptable brands and specifications—NEVER mix anti-freeze types*)

Fuel System Treatment

Step 1: If the boat will be placed in storage with fuel (no alcohol in the mix) in the tank, fill the tank with fresh fuel and a sufficient amount of Sta-Bil gasoline stabilizer to treat the entire tank. Follow instructions on the container.

Step 2: If the boat will be placed in storage with fuel that contains alcohol, the fuel tank should be drained as completely as possible, disposed of properly, and Sta-Bil gasoline stabilizer added to any fuel remaining in the tank. Follow the directions on the container.

Step 3: Start the engine and operate at idle until the engine reaches normal operating temperature. (If using a hose and adapter, adjust the faucet to avoid over-cooling the engine at low RPM.) Run the engine for at least 15 minutes to ensure that the fuel stabilizer enters the engine's fuel system.

WARNING

Running the engine with the flame arrestor removed increases the possibility of fire or explosion if the engine should backfire and gasoline fumes are present. If the engine is operated without the flame arrestor secured, extreme care must be taken to ensure that the engine compartment is well-ventilated and that no fuel leaks are present.

Step 4: Carefully loosen the flame arrestor and lift it far enough to insert the tube of the fogging oil can. Spray four to six (4 to 6) ounces of oil into the throat of the carburetor or throttle body. Shut off the engine. Re-attach the flame arrestor and seal with low-tack tape.

Step 5: Perform the annual maintenance as described in the previous chapter.

Step 6: Loosen all accessory drive belts and check their condition.


All Engines

Step 1: Drain water from the exhaust manifolds. Uncouple the hose quick-disconnect and drain the manifolds. A small brass screw-in plug located on the manifolds must also be removed. The engine manufacturer recommends leaving the drain plugs out or the hose uncoupled until the boat is placed back in service.

Step 2: Remove both hoses from the raw water pump on the front of the engine. Drain any remaining water from the hoses.

Step 3: Remove the raw water pump impeller from the pump housing. If the impeller shows any signs of damage or wear, discard it. If it can be re-used, lubricate the impeller with Vasoline or soap and seal in an airtight bag.

Note: It is extremely important to pay attention to the impeller during use. At any sign of wear, replace it. If you have used a single impeller throughout the season, replace it. Be certain that when the boat is placed in service the following season that you have an impeller in the raw water pump! Failure to follow these guidelines may result in nullifying your warranty!

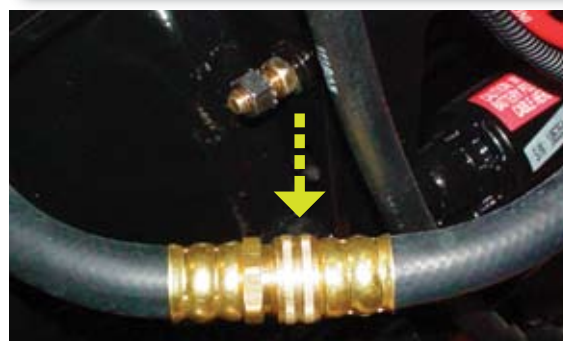


Step 4: Remove the hose from the lower end of the transmission cooler. Inspect the cooler for any debris such as weeds, plastic pieces, etc.

Raw Water-Cooled Engines

Step 1: Remove the drain plug on the port side and knock sensor from the starboard side of the engine to allow for the remainder of the water draining function.

Notice: Some 5.7 Liter engines have a knock sensor located in the drain location. The knock sensor must be carefully removed to drain that side of the block. Also, on the 8.1 Liter engine, removing the knock sensor does NOT drain the block. Remove the plugs from the brass fillings on both sides of the engine to drain water from the block.

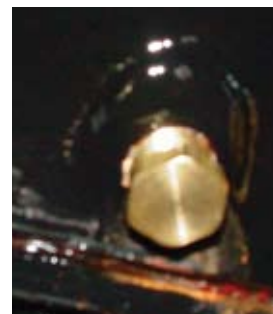

NOTE: Placing the drain plugs in a plastic bag and attaching it to the steering wheel of the boat will act as a reminder to reinstall the drain plugs during recommissioning in the spring.

Step 2: Use a short piece of stiff wire to dislodge any rust or scale that may be around the drain hole.

Step 3: Disconnect the large diameter hose that runs from the water circulating pump to the thermostat housing. Make sure all of the water drains from the hose.

Fresh Water-Cooled Engines

Step 1: Remove the raw-water inlet and outlet hoses from the intake side of the heat exchanger.

Step 2: Check the level of the coolant on the fresh water side of the heat exchanger. Use the anti-freeze tester to test the strength of the mixture.

Notice: A special anti-freeze tester designed to be used with propylene glycol anti-freeze is required to test the strength of the mixture.

Step 3: If the coolant level is low, add a sufficient amount of coolant/water mix to fill the heat exchanger. Use an appropriate mix of propylene glycol anti-freeze and distilled water, mixed in accordance with the directions on the container for the anticipated temperatures.

Step 4: If the coolant in the heat exchanger is not strong enough to protect the engine to the lowest anticipated temperature, take your boat to your dealer for replacement of the coolant.

Drive Train Preparation

Step 1: Change the transmission fluid and clean the filter screen.

Step 2: Remove the attaching hardware from the propeller shaft coupling. Separate the flanges and coat the surfaces with multi-purpose grease.

General Power Package Preparation

Step 1: Clean dirt, grime and grease from painted surfaces of the engine and drive train.

Step 2: Touch up painted areas of the engine and transmission.

Step 3: Lubricate throttle and shift linkages and cables with multi-purpose grease.

Step 4: Spray the entire engine with a corrosion protectant and lubricant.

Step 5: Disconnect the battery cables from the battery and charge the battery fully. If you remove the battery from the boat, store it in a cool and dry place. Never store batteries close to heat, spark or flame-producing devices.

Step 6: Leave the engine box cover propped open about two inches (2") to ventilate the engine compartment.

Other Winterization Preparations

Step 1: Remove the bilge drain plug immediately after taking the boat out of water. After a general bow-to-stern washing, raise the bow of the boat higher than the stern to allow as much water as possible to drain from the bilge, while performing other storage preparations.

Step 2: Thoroughly clean the hull, deck and interior of the boat as soon as it is removed from the water. Cleaning at this time is easier because any marine growth is still wet. Be sure to allow a few days of air drying to prevent mildew that results from trapped moisture. (See the Cleaning section.)

Step 3: Apply a coat of wax to the entire surface of the boat. We suggest MasterCraft Premium Marine Wax for excellent coverage.

Step 4: If your boat is equipped with a heater, shower or ballast bags, be sure to disconnect the hoses and drain any remaining water in the lines to avoid freezing. Even small amounts of water in any of these areas can cause significant damage upon freezing and such damage is not covered under warranty!

Note: Be sure that hoses will not become entangled in the engine V-belt when the engine turns over or the hose and/or the belt will be damaged.

Step 5: Use duct tape to seal the exhaust flaps to prevent dirt and nesting rodents from entering.

Step 6: Cover the boat with a boat cover or tarp.

Note: If the boat is to be stored outside and subject to accumulations of snow, water and ice, a support should be made for the boat cover so that it will not sag, rip or tear, thereby allowing water to enter the boat. Two-inch diameter PVC plumbing pipe is ideal for this purpose. It is readily available at local hardware stores, and it is easy to work with. Also, its rounded shape will prevent damage to the canvas.

Ballast System Preparations for X-1, X-Star and all MariStar models

Step 1: Locate the shut-off valve.

Step 2: Remove the winterization cap immediately adjacent to the shut-off valve. Attach a water hose to the "T" and place the other end in a gallon of non-toxic, RV-type anti-freeze.

Step 3: Turn on one pump to fill and pump until anti-freeze comes out the thru-hull. Then shut off.

Step 4: Repeat on all pumps.

Step 5: After placing anti-freeze in all three pumps, turn all pumps to fill and pump anti-freeze into the tanks and/or bags.

ProStar Models, except X-1

Step 1: Attach a hose to the starboard side ballast hose that comes out of the deck at the rear seat.

Step 2: Place the other end into a gallon of non-toxic, RV-type anti-freeze.

Step 3: Turn the pump on to empty and pump anti-freeze into the system until anti-freeze comes out of the thru-hull on the side.

Step 4: Turn the pump on to fill and pump anti-freeze back into the jug.

Re-Activating the Boat After Storage

Step 1: Remove the duct tape from the exhaust flaps.


Step 2: Charge and install the battery in the boat, following all safety precautions associated with changing batteries.

Step 3: Re-install the drain plugs or petcocks on each side of the engine block. EFI engines have a knock sensor located in one of the drain holes. This unit must be re-installed in the drain hole. Carefully install this unit without any additional thread sealant. Be careful to avoid overtightening this unit. Torque specifications for installation of the knock sensor is 14-16-ft.-lbs.

Step 5: Re-attach the large diameter hose to the water circulation pump.

Step 6: Re-install the transmission cooler hose connection.

- Step 7:* Install the raw water impeller and reconnect the hoses to the raw water pump. Use a new gasket, even if the one removed at winterization time appeared in good condition.
- Step 8:* Install new spark plugs.
- Step 9:* If applicable, reconnect the hoses to your heater or shower.
- Step 10:* Check the engine compartment and bilge for signs of nesting animals. Clean as necessary.
- Step 11:* Check the condition of the distributor cap and rotor (where applicable). Replace if either shows signs of wear, damage or corrosion.
- Step 12:* Check the entire engine system for fluid, oil and coolant levels. Add as necessary.
- Step 13:* Check the entire engine for cracks or leaks caused by freeze damage.
- Step 14:* Check all hose clamps for tightness. Install the bilge drain plug and the rear drain plug in boats equipped with certain types of ballast systems.
- Step 15:* Grease the propeller shaft taper and install the propeller.
- Step 16:* Perform the daily maintenance. If not performed prior to storage, perform the annual maintenance.
- Step 17:* If the boat is equipped with the optional fresh-water cooling system and was drained for storage, fill the system with fresh coolant solution per instructions.
- Step 18:* Check the alignment between the output flange on the transmission and the propeller shaft flange. If the maximum feeler gauge that can clip between the flange faces at any point is 0.003", the unit is properly aligned. If a thick gauge can be inserted at any point, the engine must be re-adjusted until proper alignment is obtained. This should be performed by your dealer.
- Step 19:* For all models, with the boat in the water, cycle the key ON and then OFF two or three times, allowing 10 seconds between key cycles, before cranking the engine. This allows the fuel pump to prime the fuel lines; then start the engine. In the event the engine does not respond, allow a two-minute cool-down period for every 30 seconds of cranking. When the engine fires, keep a close watch over the gauge readings and check for leakage and abnormal noises. Keep speeds low for the first 15 minutes to allow the engine to reach normal operating temperatures.
- Step 20:* In ProStar 197s equipped with ballast bags, when reconnecting the hook-ups, be sure that you squeeze the prongs to help slide back on. Dish soap or some similar product will help slide the connects back together. Note that the red ring goes over the raised ring to ensure a working connection.

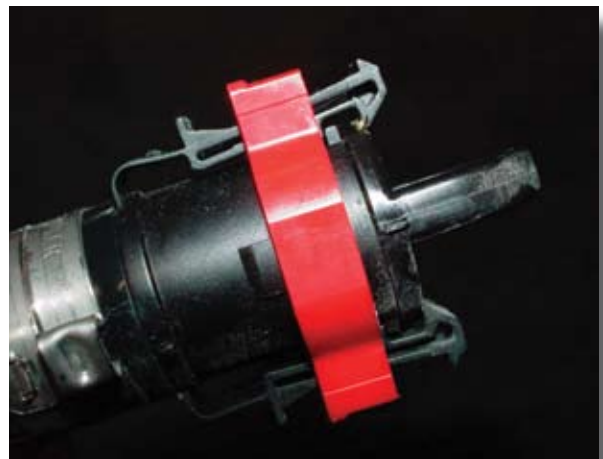

Unscheduled Maintenance

Propeller damage is caused by striking solid objects. If the propeller is not rotating at the time it strikes a solid object, the damage is usually confined to just one blade and may be difficult to see. If the propeller is rotating when it strikes an object, usually the resulting damage can easily be seen on all blades.

Checking/Repairing Propellers

Step 1: Ensure the engine is OFF and the engine safety starting switch disconnected. Place the throttle/shift control lever in forward gear.

Step 2: Clamp a small rule scale to the shaft strut, parallel to the shaft so that the end of the scale is 3/32-inches from the leading edge of a propeller blade.

Step 3: Rotate the propeller slowly. There should be no more than 3/32-inch variance between the blades. If the propeller is damaged, see your MasterCraft dealer.

Changing Propellers


Step 1: Ensure the engine is OFF and the engine safety starting switch disconnected. Place the throttle/shift control lever in forward gear.

Step 2: Remove and discard the cotter pin.

Step 3: Remove the propeller nut.

Step 4: Tap the center hub of the propeller with a rubber mallet to release the propeller. Inspect the shaft and propeller splines for damage.

Step 5: Thoroughly clean and apply a light coat of waterproof marine multi-purpose grease to the splined area of the shaft and propeller.

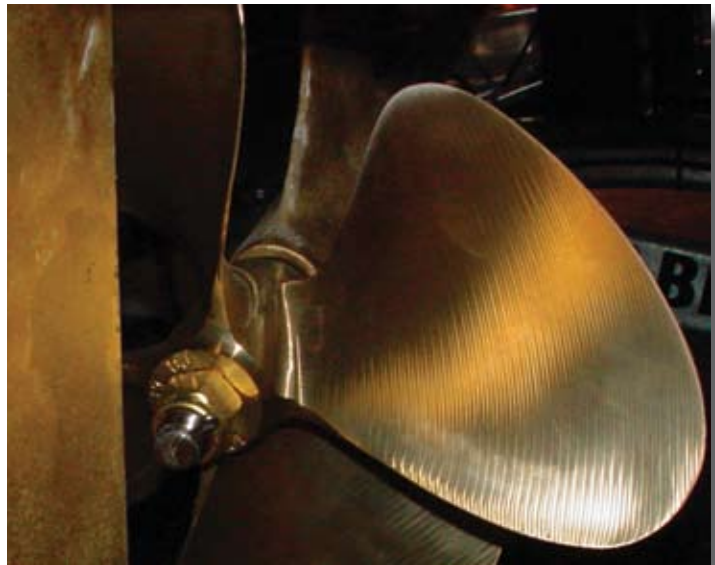

Step 6: Align the splines and carefully install the propeller onto the shaft. DO NOT FORCE IN PLACE.

Step 7: Install the propeller nut and torque to 50-ft-lbs.

Step 8: Install a new cotter pin and bend the ends around the shaft to lock the propeller on the shaft.

Checking Speedometer Calibration

For tournament use and practice, accurate speedometer readings are a must. To calibrate the speedometer you need an accurately measured course of 850 feet and a certified stopwatch accurate to a thousandth of a second. To calibrate the AWSA official-tournament rules:

Step 1: Approach the course at an indicated 36 miles per hour (MPH). Hold the speed steady and have an observer check the course time with a stopwatch.

Step 2: If the course time is between 15.88 and 16.28 seconds, no adjustment is necessary. If the course time is not within tolerance, the adjustment switch is on the lower right panel of the dash on the ProStar 190 and 197.

Guide to Troubleshooting

The following charts will assist you in finding and correctly minor mechanical and electrical problems with your boat. Problems are listed in the order of the most-likely event to the least-likely.

To correct a problem, first determine what the symptom is. Start with the first cause and eliminate the possibility of each until the problem is corrected. Because of the specialized skill and tools needed to correct major issues, we have not included that information. If you suspect a problem not addressed here, please contact your MasterCraft dealer.

If you are experiencing a problem, before shutting down your boat check your surroundings. If suddenly stopping the power would result in placing other boats in the vicinity in jeopardy, continue on until you can safely slow or stop to analyze your situation. Always be aware of your surroundings and how your actions may impact other boaters!

Problem	Possible Causes	Solution
Engine will not turn over.	<ul style="list-style-type: none"> Safety switch tether not connected. Throttle/shift control in gear. Main circuit breaker open. Battery terminal corroded. Battery weak or worn out. Loose or corroded battery wiring connectors. Defective starter solenoid. Defective neutral safety switch. Defective starter motor. 	<ul style="list-style-type: none"> Connect the safety switch tether. Shift to neutral. Re-set the circuit breaker. Clean the battery terminals. Charge or replace the battery. Clean and tighten the battery wiring connectors. Replace the starter solenoid. Replace the neutral safety switch. Replace the starter motor.
Engine turns over but will not start.	<ul style="list-style-type: none"> Safety switch tether not connected. No fuel to the engine. No fuel in the tank. Fuel filter clogged. Contaminated fuel. Weak or shorted ignition coil. Distributor problems. 	<ul style="list-style-type: none"> Connect the safety switch tether. Turn the fuel valve to ON position if the boat is equipped with ON-OFF switch. Fill the fuel tank. Have dealer replace the fuel filter. Drain fuel properly and have dealer replace the filter. Replace the ignition coil. See your dealer.
Engine is hard to start.	<ul style="list-style-type: none"> Flooded engine. Plugged flame arrestor. Fouled spark plugs. Loose coil or ignition wires. Battery cables loose or corroded. Weak battery. Ignition problems. 	<ul style="list-style-type: none"> Start the engine at full throttle and back off immediately. Clean the flame arrestor. Replace the spark plugs. Tighten coil or ignition wires. Clean and tighten the battery cables. Charge or replace the battery. See your dealer.
Engine misses or idles rough.	<ul style="list-style-type: none"> Fouled spark plugs. Loose or defective high-tension leads. Plugged PCV valve. Weak ignition coil. Vacuum leak. 	<ul style="list-style-type: none"> Have your dealer replace the spark plugs. Have your dealer tighten or replace the high-tension leads. Have your dealer replace the PCV valve. Have your dealer replace the ignition coil. See your dealer.

Poor boat performance.	Fouled spark plugs. Contaminated fuel. Plugged flame arrestor. Weak ignition coil. Fuel filter clogged. Ignition problems.	Have your dealer replace the spark plugs. Drain fuel properly and have dealer replace filter. Clean the flame arrestor. Have your dealer replace the ignition coil. Have your dealer replace the fuel filter. See your dealer.
Poor gas mileage.	Fouled spark plugs. Plugged flame arrestor. Inefficient driving habits. Plugged PCV valve. Ignition problems.	Have your dealer replace the spark plugs. Clean the flame arrestor. Plane the boat quickly, then slow down to desired speed. Have your dealer replace the PCV valve. See your dealer.
Throttle/shifting problems.	Corroded cables. Defective throttle return spring. Low transmission oil level. Sticking transmission shift detent ball. Kink in cable(s).	Clean and lubricate the cables. Replace the throttle return spring. Replenish transmission fluid. Clean and lubricate the detent ball. Have your dealer replace the cable(s).
Steering problems.	Corroded cable. Rudder worn.	Clean and lubricate the cable. See your dealer.
Excessive vibration.	Bent strut. Fouled propeller. Damaged propeller. Misaligned propeller shaft coupling. Bent propeller shaft.	Replace the strut. Remove objects from the propeller shaft and rudder. Replace the propeller. See your dealer for proper alignment. See your dealer.
Electrical problems.	Open circuit breaker or blown fuse. Loose wiring connections or corrosion. Defective sending unit. Shorted wiring harness. Defective switch or gauge.	Re-set the circuit breaker or replace the fuse. Clean and tighten wiring connections. Replace the sending unit. Have your dealer repair the wiring harness. See your dealer.
No speedometer reading.	Defective speedometer. Defective speedometer paddle wheel.	Have your dealer check or replace the speedometer. Have your dealer check or replace the paddle wheel.
Incorrect speedometer reading.	Improper calibration.	Have your dealer check or replace the speedometer.
Gauges do not work or the accessory does not work.	Breaker has tripped. Fuse has blown. Low battery. Insufficient battery supply.	Re-set the breaker. Replace the fuse. Check the battery voltage for a loose ground. Replace battery with one that has at least 750CCAs.

Limited Warranty Statement

1. **Limited Warranty and Term.** MasterCraft Boat Company, Inc. (“MasterCraft”) warrants to the original retail purchaser that the following components of each new boat shall be free from material defects in materials and workmanship to the extent set forth below, under normal use and when operated and maintained in accordance with MasterCraft’s instructions, for the period indicated:
 - 1.1 **Deck, Hull, Liner and Stringers.** From the date of the original retail purchase, the deck, hull, liner and stringer system (collectively, “Structural Components”) is warranted for as long as the original purchaser owns the boat.
 - 1.2 **Gel Coat.** Because environmental operating conditions and customer maintenance/care considerations are factors that have a significant effect on the condition and the durability of the gel coat that is applied to all MasterCraft boats at the factory, MasterCraft does not provide, and hereby expressly disclaims, any warranty on the gel coat covering the exterior surfaces of the boat. Therefore, cosmetic issues relating to the appearance of the gel coat such as blisters, scratches, discoloration or fading are not covered by this Limited Warranty. However, in the event that the gel coat is materially damaged due to a covered defect to the boat’s Structural Components, the damage to the gel coat will be covered under this Limited Warranty in connection with the warranty repair under Section 1.1 hereof. Any materials defects in the gel coat that are determined by MasterCraft, in its sole discretion, to have been caused by the application/installation of the gel coat at the factory, will be covered under this Limited Warranty, but will be reviewed on a case-by-case basis. All communications regarding any issues relating to gel coat should be addressed with the MasterCraft authorized Dealership.
 - 1.3 **Other Component Parts (Excluding Engine and Transmission).** One (1) year from the date of the original retail purchase of the boat or the initial use of the boat, whichever first occurs.
 - 1.4 **Trailer and Trailer Component Parts.** One (1) year from the date of the original retail purchase of the boat or the initial use of the boat, whichever first occurs. See the Trailer Owners Manual for more details.
2. **Engine and Transmission.** The engines used in MasterCraft boats are supplied by Indmar Products Company, Inc., in Millington, Tennessee (“Indmar”) or Crusader, Inc., in Little Mountain, South Carolina (“Crusader”). These companies provide a separate warranty of three (3) years from the date of the original retail purchase of the boat or the initial use of the boat, whichever first occurs, for the engine and transmission. A statement of the Indmar Power Train Warranty or Crusader Warranty is provided separately to the original retail purchaser. MasterCraft provides no independent warranty with regard to the engine and transmission; however, the owner may contact MasterCraft at the address or telephone number listed in Section 7 below to obtain contact information for making claims or inquiries under the Indmar Power Train Warranty. Contact information for Crusader is provided in the warranty statement provided at time of purchase to the original retail purchaser.
3. **Warranty Conditions, Limitations and Exclusions.** MasterCraft boats are manufactured by trained craftsmen from high-quality materials and components. However, conditions outside MasterCraft’s control require specific



limitations on, and exclusions from, coverage under this warranty. The Limited Warranty on the Structural Components set forth in Section 1 above does not cover or include any other components fastened or applied to the hull or deck. This Limited Warranty constitutes the final, complete and exclusive statement of warranty terms, and no other person or entity is authorized to make any other warranties or representations on behalf of MasterCraft. Furthermore, the Limited Warranty set forth in Section 1 (including all subsections) hereof does not cover the following:

- (a) damage caused by misuse, negligence, accident; collision or impact with any object;
- (b) damage caused by any improper alteration or modification to the boat or any of its component parts or accessories, including damage resulting from alteration, modification, repair or replacement in such a way as to increase the cubic-inch capacity or horsepower output of the engine and boat as originally manufactured;
- (c) damage caused by the use of improper or contaminated fuel or fluids;
- (d) damage caused by the use of customer-applied chemicals or accidental spills;
- (e) damage caused by failure to maintain the boat in accordance with the maintenance provisions in the Owners Manual or improper maintenance of the boat;
- (f) damage resulting from the use of the boat for any racing, speed, commercial competition or performance demonstration;
- (g) damage resulting from use of the boat for rental, commercial or industrial purposes;
- (h) damage to hardware and other components fastened or adhered to the hull, deck or liner;
- (i) damage caused by fire, theft, freezing, vandalism, explosion, lightning, wind, hail storms, flooding or other natural disaster;
- (j) damage to any component parts and accessories not manufactured by MasterCraft, including but not limited to the engine, drivetrain, transmission, propeller, shift and throttle control levers and cables, pumps, blowers, windshields, canvas, upholstery, tower and accessories, instrumentation and steering systems; however, such items may be warranted by the individual manufacturer, and if possible, MasterCraft will provide the owner with a copy of the manufacturer's warranty;
- (k) damage caused by use of any non-MasterCraft trailer;
- (l) damage caused by improper support of the boat on davits, hoist system or boat lift of any kind;
- (m) damage to paints, varnishes, gel coat surfaces and colors, chrome-plated or anodized finishes, floor and floor covers and any other surface coatings, as well as damage due to in-water storage without proper barrier coat and bottom paints (NOTE: Although MasterCraft uses the highest-grade gel coat materials, a condition may develop where the bottom of the boat may show signs of discoloration and/or blisters if the boat is left in the water for long periods of time, and therefore, a proper barrier coat and bottom paint should be used whenever it is anticipated that the boat will be left in the water for an extended period of time);
- (n) damage to the trailer and its parts or components due to abrasions, rock chips, rust, improper care or maintenance, or use in salt or brackish water; however, the finishes of galvanized trailers, which are designed for use in salt or brackish water, are warranted to be free from damage resulting from use in salt or brackish water for one (1) year from the date of the original retail purchase or the initial use of the trailer, whichever first occurs;
- (o) damage caused by dealer-installed options or accessories;
- (p) damage caused by consumer-installed options or accessories;
and/or
- (q) all warranted coverage will expire after ninety (90) days on boats used for commercial purposes.



4. **Disclaimer and Limitation of Implied Warranties.** THE EXPRESS LIMITED WARRANTY SET FORTH HEREIN IS IN LIEU OF ALL OTHER WARRANTIES AND REPRESENTATIONS, EXPRESS OR IMPLIED, AND TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, MASTERCRAFT DISCLAIMS, AND THE OWNER HEREBY EXPRESSLY WAIVES, ANY AND ALL OTHER WARRANTIES OR REPRESENTATIONS OR ANY KIND OR NATURE, INCLUDING, BUT NOT LIMITED TO, IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, OTHER THAN THOSE WARRANTIES WHICH ARE IMPLIED BY, AND ARE INCAPABLE OF EXCLUSION, RESTRICTION OR MODIFICATION UNDER APPLICABLE LAW. THE TERM OF

ANY IMPLIED WARRANTIES THAT CANNOT BE DISCLAIMED UNDER APPLICABLE LAW, INCLUDING, BUT NOT LIMITED TO, IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED TO THE DURATION OF THE FOREGOING EXPRESS WARRANTY PERIODS APPLICABLE TO THE RESPECTIVE COMPONENTS. SOME STATES DO NOT ALLOW THE EXCLUSION OF IMPLIED WARRANTIES AND/OR DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATIONS MAY NOT APPLY TO YOU. THIS LIMITED WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS. YOU MAY HAVE OTHER RIGHTS WHICH VARY FROM STATE TO STATE.

5. **Limitation of Liability.**

- 5.1 **Liability Limitation: Exclusion of Consequential Damages.** This warranty is for the benefit of the owner and MasterCraft, and shall not create or evidence any right in any third party. THE REPAIR OR REPLACEMENT OF DEFECTIVE COMPONENT PARTS AS PROVIDED UNDER THIS LIMITED WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER. TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, IN NO EVENT SHALL MASTERCRAFT BE LIABLE FOR ANY INCIDENTAL, CONSEQUENTIAL, SPECIAL, INDIRECT, PUNITIVE OR EXEMPLARY DAMAGES OR LOST PROFITS WHATSOEVER ARISING OUT OF THE USE OR INABILITY TO USE THE BOAT OR ANY COMPONENT PART THEREOF, OR FOR ANY BREACH OF THIS WARRANTY OR OTHERWISE, EVEN IF MASTERCRAFT HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES OR SUCH DAMAGES COULD REASONABLY HAVE BEEN FORESEEN BY MASTERCRAFT. However, some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.
- 5.2 **Purchase Price Limitation.** In any event, MasterCraft's entire liability under any provision of this Limited Warranty shall be limited to the repair or replacement of the boat, trailer or component part, or the refund of the purchase price paid by the customer for the boat, trailer or component part found to be defective within the applicable warranty period. This shall constitute MasterCraft's sole liability and obligation in the event of any claim arising out of its performance or non-performance of any provision of this Limited Warranty. Because some states and jurisdictions do not allow the exclusion or limitation of liability, the above limitations may not apply to you.



6. **Transfer of Limited Warranty.** Upon the first sale, conveyance or other transfer of the boat or trailer by the original retail purchaser, any remaining unexpired Limited Warranty coverage shall be transferred to the second owner and shall remain in effect for the remainder of the applicable warranty period(s) set forth in Sections 1.1, 1.2, 1.3 and 1.4 above (which warranty periods begin to run from the date of the original retail purchase of the boat or trailer, or the first use of the boat or trailer, whichever first occurs, as applicable), upon delivery of the warranty transfer card and payment of the applicable warranty transfer fee to MasterCraft. With respect to the Lifetime Limited Warranty (granted only to the original retail purchaser) on the Structural Components set forth in Section 1.1 above,

if the sale, conveyance or other transfer of the boat by the original retail purchaser to another person or entity occurs within three (3) years of the date of the original retail purchase of the boat by the original retail purchaser, then the warranty on the Structural Components shall be transferred to the second owner and shall continue in effect for a period of ten (10) years from the date of the original retail purchase of the boat by the original retail purchaser. If the sale, transfer or conveyance of the boat by the original retail purchaser occurs more than three (3) years after the date of the original retail purchase of the boat, then the Limited Warranty on Structural Components (as well as all other warranties) shall be void as of the date of transfer and shall not be transferable to the second owner.



Only one (1) transfer under the provisions of this Section 6 (from the original retail purchaser to the second owner), within the applicable time period, may be made. In the event of a sale or transfer of the boat or trailer by a second owner to a subsequent purchaser, all coverage under this Limited Warranty shall immediately be terminated and the Limited Warranty shall become null and void. No transfer of this Limited Warranty will operate to extend the warranty periods set forth in Section 1 above. In order to effectuate the transfer of the Limited Warranty, the original retail purchaser and the new owner must properly fill out the warranty transfer card found in the back of the Owners Manual and deliver the completed card, together with a check made payable to "MasterCraft Boat Company, Inc." in the amount of the warranty transfer fee, via U.S. Mail, postage prepaid, to MasterCraft at the address

shown on the warranty transfer card. The card and check for the warranty transfer must be post-marked within the time period specified above in this Section 6 in order for the warranty transfer from the original retail purchaser to the second owner to be effective.

7. **Warranty Claims.** In order to maintain warranty service under this Limited Warranty, the owner must return the defective boat or component part to an authorized MasterCraft repair facility, or to MasterCraft's factory at the below address, within the applicable warranty period. For questions regarding warranty service or to obtain information regarding warranty service or to obtain information regarding the nearest authorized MasterCraft repair facility, please contact MasterCraft at the following address or telephone number:

MasterCraft Boat Company, Inc.
Attention: Warranty/Customer Service Department
100 Cherokee Cove Drive
Vonore, Tennessee 37885
1-423-884-2221

Subject to the terms of this Limited Warranty, any covered boat or component part with a material defect in materials or workmanship that is returned to an authorized MasterCraft repair facility or MasterCraft's factory during the appropriate warranty period will be repaired or replaced, at MasterCraft's sole option, without charge to the owner for parts and labor. This provision is subject to the following terms and conditions:

- (a) MasterCraft shall be obligated only to repair or replace those items that prove defective, in MasterCraft's sole discretion, upon examination by MasterCraft's authorized repair facility or MasterCraft's own personnel, as applicable;
 - (b) MasterCraft warrants its repairs or replacements only for the remainder of the applicable warranty period;
 - (c) MasterCraft shall, in its sole discretion, fulfill its obligation to repair or replace any defective item at its factory or authorized repair facility;
 - (d) The owner shall be responsible for all costs associated with the transportation of the boat, towing bills, trailer or component part(s) to the authorized MasterCraft facility and for any return transportation.
8. **No Modification of Warranty.** No oral or written information, advice or communication of any nature by or from MasterCraft or its representatives, employees, dealers, agents, distributors or suppliers shall create a warranty or in any manner increase or modify the scope of this Limited Warranty.

Warranty Transfer

For the first purchase of a specific MasterCraft boat, the original owner will receive a warranty registration card to complete and turn in. You should be aware that under federal law, completion of the warranty card is a requirement and should be completed as follows:

1. Dealer must complete the warranty registration at date of sale.
2. **Dealer must secure buyer's signature!**
3. Dealer provides a copy to the buyer, retains a copy for dealership files and forwards the remaining copy to MasterCraft.
4. Information must be mailed to the manufacturer within three (3) days of the sale.

If the MasterCraft boat is subsequently sold, MasterCraft offers a transferable warranty to the second owner. In accordance with the MasterCraft Limited Warranty, the remaining warranty against structural defect in the hull and deck will be transferred to the new owner when the following has been accomplished and verified:

- Receipt of the completed form below.
- Copy of the sales invoice.
- Payment of \$450 within fourteen (14) days of the sale date.

Upon verification, the remaining warranty will transfer, retroactive to the sale date.



**Forward form and payment to:
MasterCraft Boat Company
100 Cherokee Cove Drive
Vonore TN 37885**

Warranty Registration Transfer (forward this copy to MasterCraft)

Boat Serial Number _____ **Model No.** _____

Engine Make _____ **Serial No.** _____ **Trans. Type** _____ **Serial No.** _____

PLEASE PRINT

Previous Owner _____

New Owner's Name _____

Street Address _____

City _____ **State** _____ **Zip Code** _____

Home Phone (_____) _____ **Business Phone** (_____) _____

Date of Purchase _____ **Second Owner's Signature** _____

MUST BE SIGNED!

Be sure to enclose payment and a copy of the purchase receipt within 14 days of the sale date.

Team MasterCraft



Purchasing a new MasterCraft ProStar, MariStar or X-Series boat has the added benefit of automatic one-year membership in the fun that is Team MasterCraft. And your membership will be renewable in succeeding years, too.

No other manufacturer offers so much in terms of product, customer service, an outstanding dealer network and just pure fun by keeping other boat owners like you informed in print and online, and bringing you together in social settings.

As a member of the exclusive Team MasterCraft, you will receive:

- A Team MasterCraft tee-shirt.
- A membership kit filled with custom Team MasterCraft items.
- A personalized membership card and certificate.
- A year's subscription to STAR, the official MasterCraft owners' magazine.

You'll also be invited to special events around the country throughout the year.

Among the national, regional and local events about which you'll learn more and be invited to attend are the Water Ski Pro Tour, Regional Amateur Championships, and MasterCraft Reunion events. At most of these, you'll also be allowed into restricted areas set aside for Team MasterCraft, with excellent views of on-water events, and lots of opportunities to compare notes with other Team members, admire each others' boats, compete for prizes and have a wonderful time.

As sponsor of many events and a Pro Team of skiers and wakeboarders, MasterCraft is hands-on in the sport. You'll have opportunities to meet, receive autographs from and talk to some of the top stars. You'll also take pride when you see MasterCraft boats pulling events on television—and even in the movies!

MasterCraft will also alert you to very special events such as Camp MasterCraft, where "kids" of all ages attend to learn more about skiing and wakeboarding. You can keep track of everything by logging on to www.mastercraft.com and checking out all the exciting events going on around the country for Team MasterCraft members!

Genuine MasterCraft Parts

Genuine MasterCraft Parts

Recognizing the pride that MasterCraft owners take in their boats, MasterCraft has been diligently working to develop our own line of products designed specifically to ensure a better-looking, longer-lasting product.

Your 2007 model ProStar, MariStar or X-Series boat is just the fourth full model year to be able to utilize these products. As you maintain your boat over the coming years, use Genuine MasterCraft parts (GMP) to keep the pride!

MasterCraft Marine Motor Oil

The life of your marine engine is dependent upon proper lubrication. That is why we've developed MasterCraft Marine Motor Oil. This premium marine motor oil was formulated specifically for MasterCraft Boat Company for use in high-performance marine engines. The oil provides high viscosity and film strength for engine protection in high-load applications. You cannot get the same formula in any other engine oil!

MasterCraft is designed to protect against corrosion, wear, oxidation, varnish and sludge deposits. When used as directed in the Owners Manual, this oil assures compliance with MasterCraft warranty requirements. MasterCraft Marine Motor Oil is an exclusive product available only through genuine MasterCraft dealerships!

MasterCraft Premium All-Purpose Cleaner

Most MasterCraft boat owners pay attention to the details, especially when it comes to the maintenance and life of the boat interior. We give you information in the Owners Manual on how to extend the life of the boat interiors. We especially caution to avoid certain household cleaners, powdered abrasives, steel wool and industrial cleaners that can cause damage and discoloration. Dry cleaning fluids and lacquer solvents should not be used because they will remove the printed pattern and gloss.

No cleaner can remove every mark or stain, but we provide a table in the manual that tells the owner what to use and how to treat many stains. For regular maintenance, however, we've never told you what to use—only what not to use. Now, with this new product, MasterCraft Premium All-Purpose Clear, you can do it right!

A powerful foam cleaner that cuts through grease, dirt and grime, the foam clings to vertical surfaces and penetrates through dirt that accumulates. MasterCraft Premium All-Purposes Cleaner is an exclusive product available only through genuine MasterCraft dealerships!

MasterCraft Premium Shine & Protectant

After boat owners get the interior surfaces clean, they like to have a product that will help keep everything looking ship-shape. Waxes are not recommended for interior surfaces because many contain dyes or solvents that can permanently damage the protective coating. That's why MasterCraft developed our own Premium Shine & Protectant to guard against ultraviolet rays, environmental conditions and everyday use, while adding years of life and beauty.

This product penetrates, protects and beautifies. It contains no fluorocarbons either. MasterCraft Premium Shine & Protectant provides a protective shield that gives a long-last appeal for plastic, plexiglass, vinyl, rubber, acrylics, Formica, wood and leather—so it can be used on more than just the boat!

For best results, consumers should leave the Shine & Protectant on surfaces for several hours or overnight before removing any excess. This product is available only through genuine MasterCraft dealerships.

MasterCraft Premium Marine Wax

If you take great pride in the appearance of your boat, by using MasterCraft Premium Marine Wax you help ensure a long-lasting and attractive shine for the deck and hull. This pre-softened formula combines carnauba wax with efficient cleaning agents that remove oxidation, engine exhaust spill-off and other contaminants. MasterCraft Premium Marine Wax provides a deep gloss with long-lasting protection from UV rays, salt air and harsh weather conditions. It's great for fiberglass, gel coat, aluminum, chrome and painted surfaces.

This product protects and inhibits color fading and cleans effectively without harmful abrasives, leaving a beautiful glossy shine. It protects against harsh weather conditions, too. Using this GMP product will assist boat owners in following the requirements outlined in the Owners Manual for providing protection over the life of the boat.

MasterCraft Premium Marine Wax is an exclusive product available only through genuine MasterCraft dealerships!

Service Log

As Needed	Date	Date	Date	Date
Replace raw water impeller				
Add/change oil and filter				
Replace battery				
Every 50 Hours	Date	Date	Date	Date
Lubricate starter gear & shaft				
Change engine oil & filter				
Check all safety equipment				
Every 100 Hours	Date	Date	Date	Date
Clean flame arrestor				
Replace water impeller				
Engine tune-up				
Change transmission fluid				
Check engine mounts				
Check prop shaft coupling alignment				
Inspect exhaust flaps				
Lubricate steering system				
Lubricate shift & throttle system				
Check/replace ballast pump impeller				
Inspect complete fuel system				
Change fuel filter				

Service Log

As Needed	Date	Date	Date	Date
Replace raw water impeller				
Add/change oil and filter				
Replace battery				
Every 50 Hours	Date	Date	Date	Date
Lubricate starter gear & shaft				
Change engine oil & filter				
Check all safety equipment				
Every 100 Hours	Date	Date	Date	Date
Clean flame arrestor				
Replace water impeller				
Engine tune-up				
Change transmission fluid				
Check engine mounts				
Check prop shaft coupling alignment				
Inspect exhaust flaps				
Lubricate steering system				
Lubricate shift & throttle system				
Check/replace ballast pump impeller				
Inspect complete fuel system				
Change fuel filter				